


Remote Control Door Lock Receiver Replacement

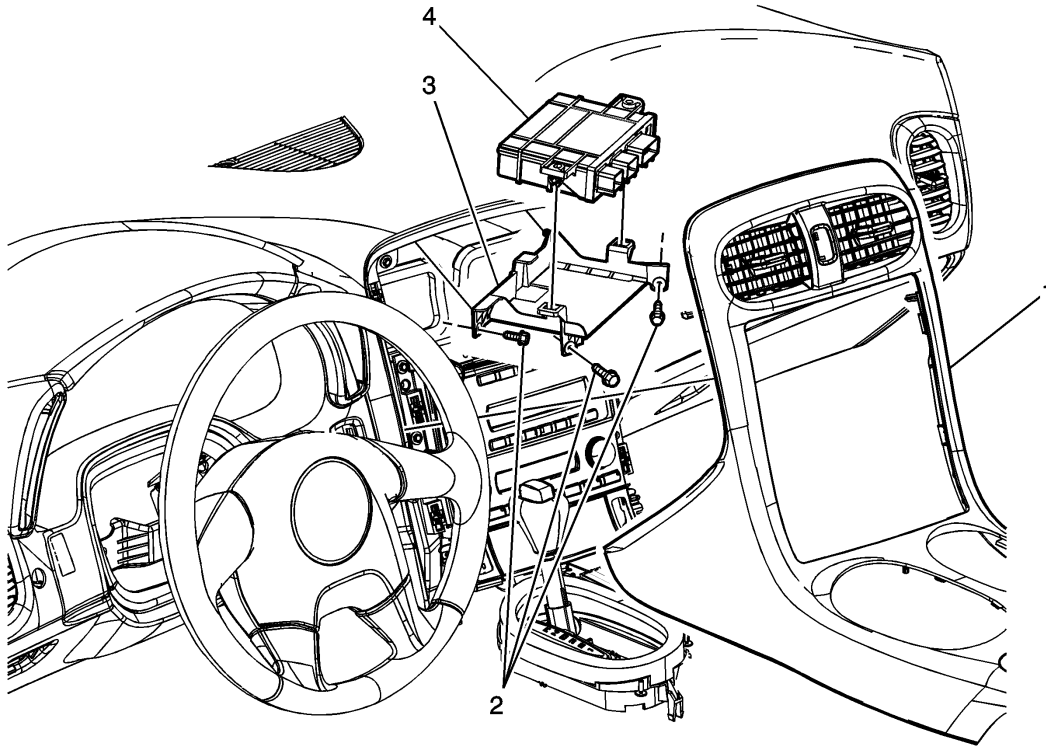

Callout	Component Name
<p>Notice: Refer to Fastener Notice in the Preface section.</p> <p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p>	
1	<p>Plate Assembly, Instrument Panel (I/P)</p> <p>Tip Remove the I/P accessory trim plate. Refer to Instrument Panel Accessory Trim Plate Replacement .</p>
2	<p>Screws, Remote Control Door Lock Receiver Bracket (Qty: 3)</p> <p>Tighten 3 N·m (27 lb in)</p>
3	<p>Bracket, Remote Control Door Lock Receiver</p>
4	<p>Receiver, Remote Control Door Lock</p> <p>Tip</p> <ol style="list-style-type: none"> 1. Release the retaining clips to remove the receiver from the bracket. 2. Reprogram the receiver. Refer to Control Module References for programming and setup information.