

**Body connector  
(rear harness)**

**Circuit breaker  
leads**


**Driver-side  
courtesy lamp  
socket. (B/W,  
B/Or)**

**Driver-side  
courtesy lamp  
switch. Thread  
thru door hinge  
pillar. (B/W)**

**Turn signal  
harness  
connector**

**Dimmer  
switch  
connector**



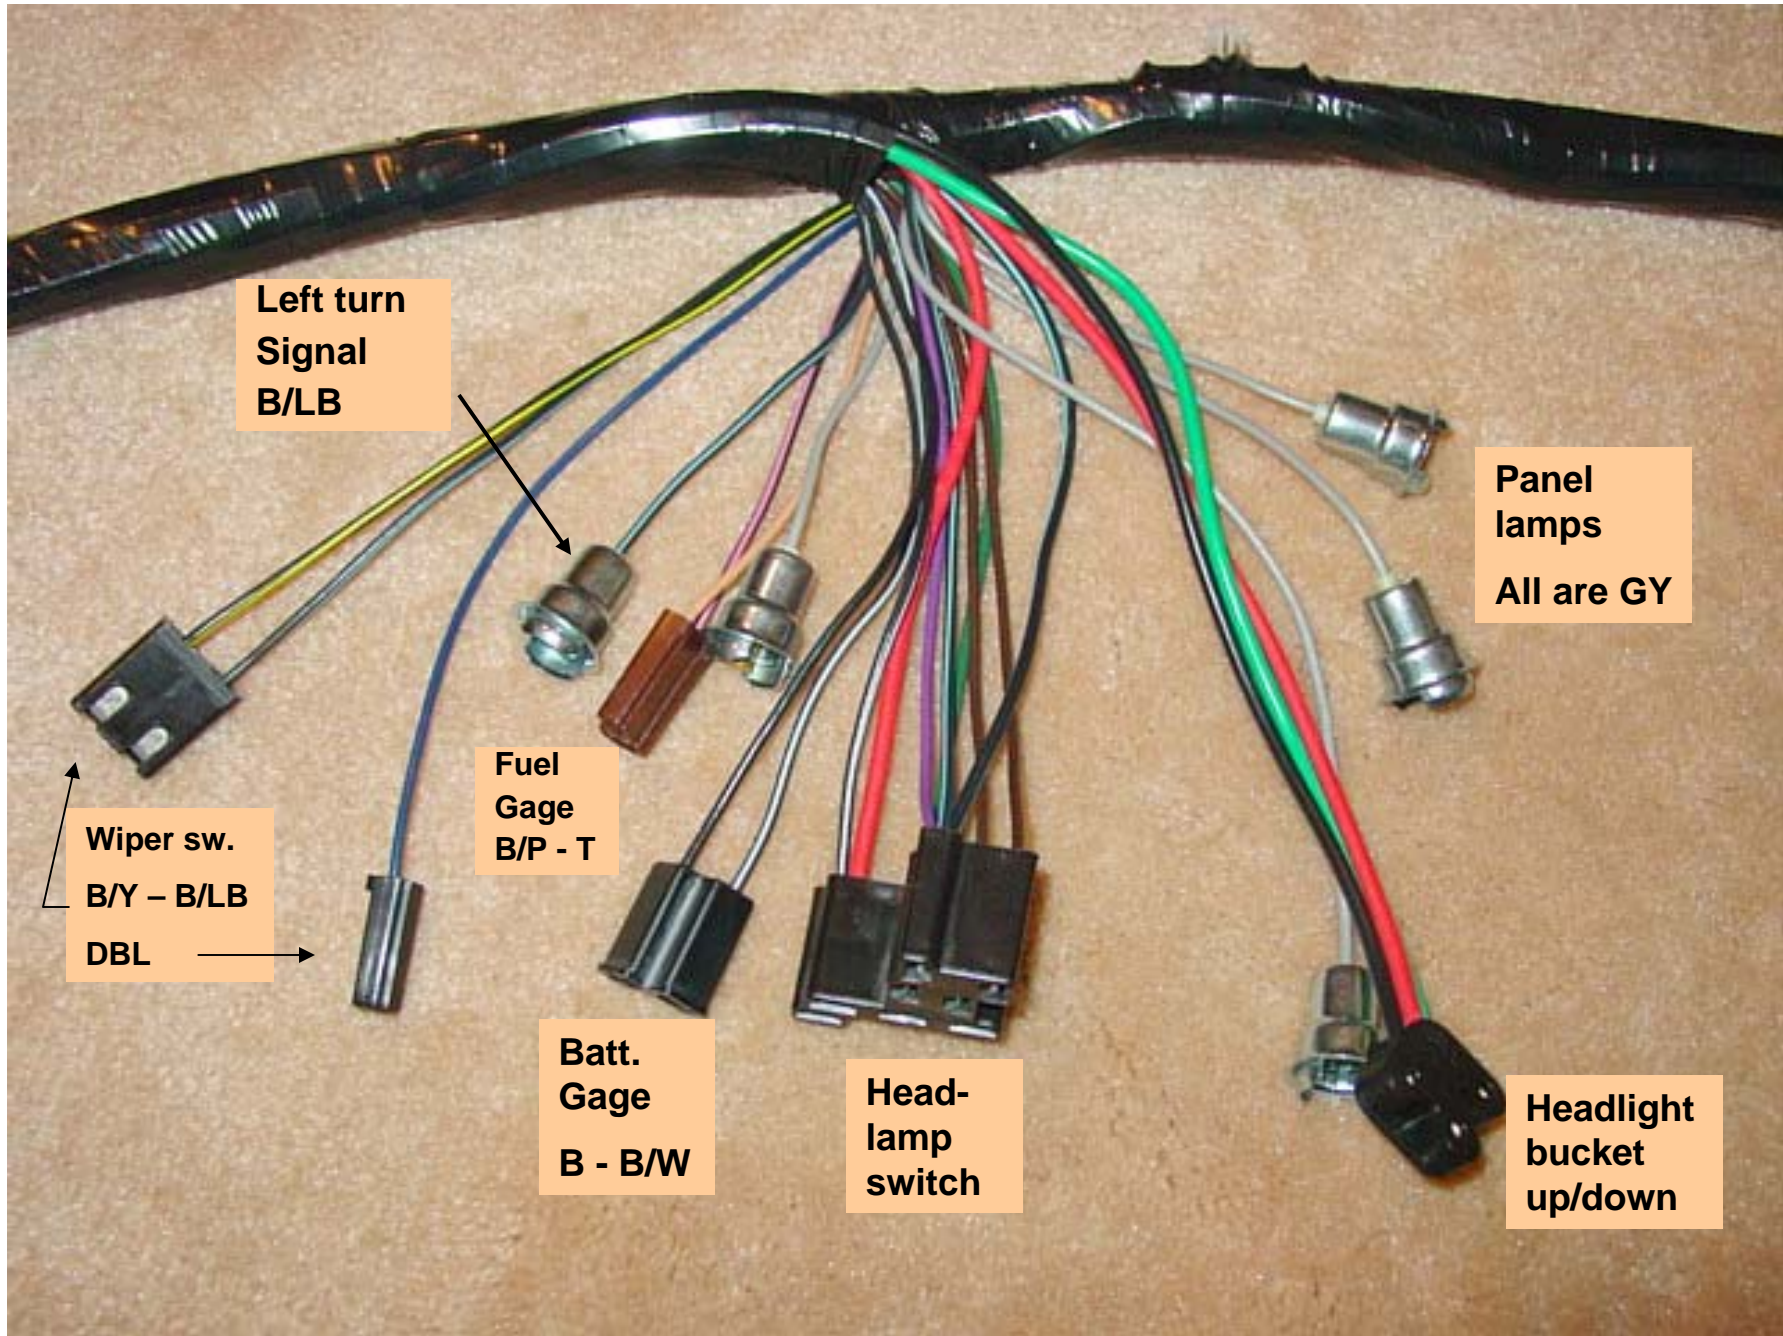

**Left turn  
Signal  
B/LB**

**Panel  
lamps  
All are GY**

**Wiper sw.  
B/Y - B/LB  
DBL**


**Fuel  
Gage  
B/P - T**

**Batt.  
Gage  
B - B/W**

**Head-  
lamp  
switch**

**Headlight  
bucket  
up/down**



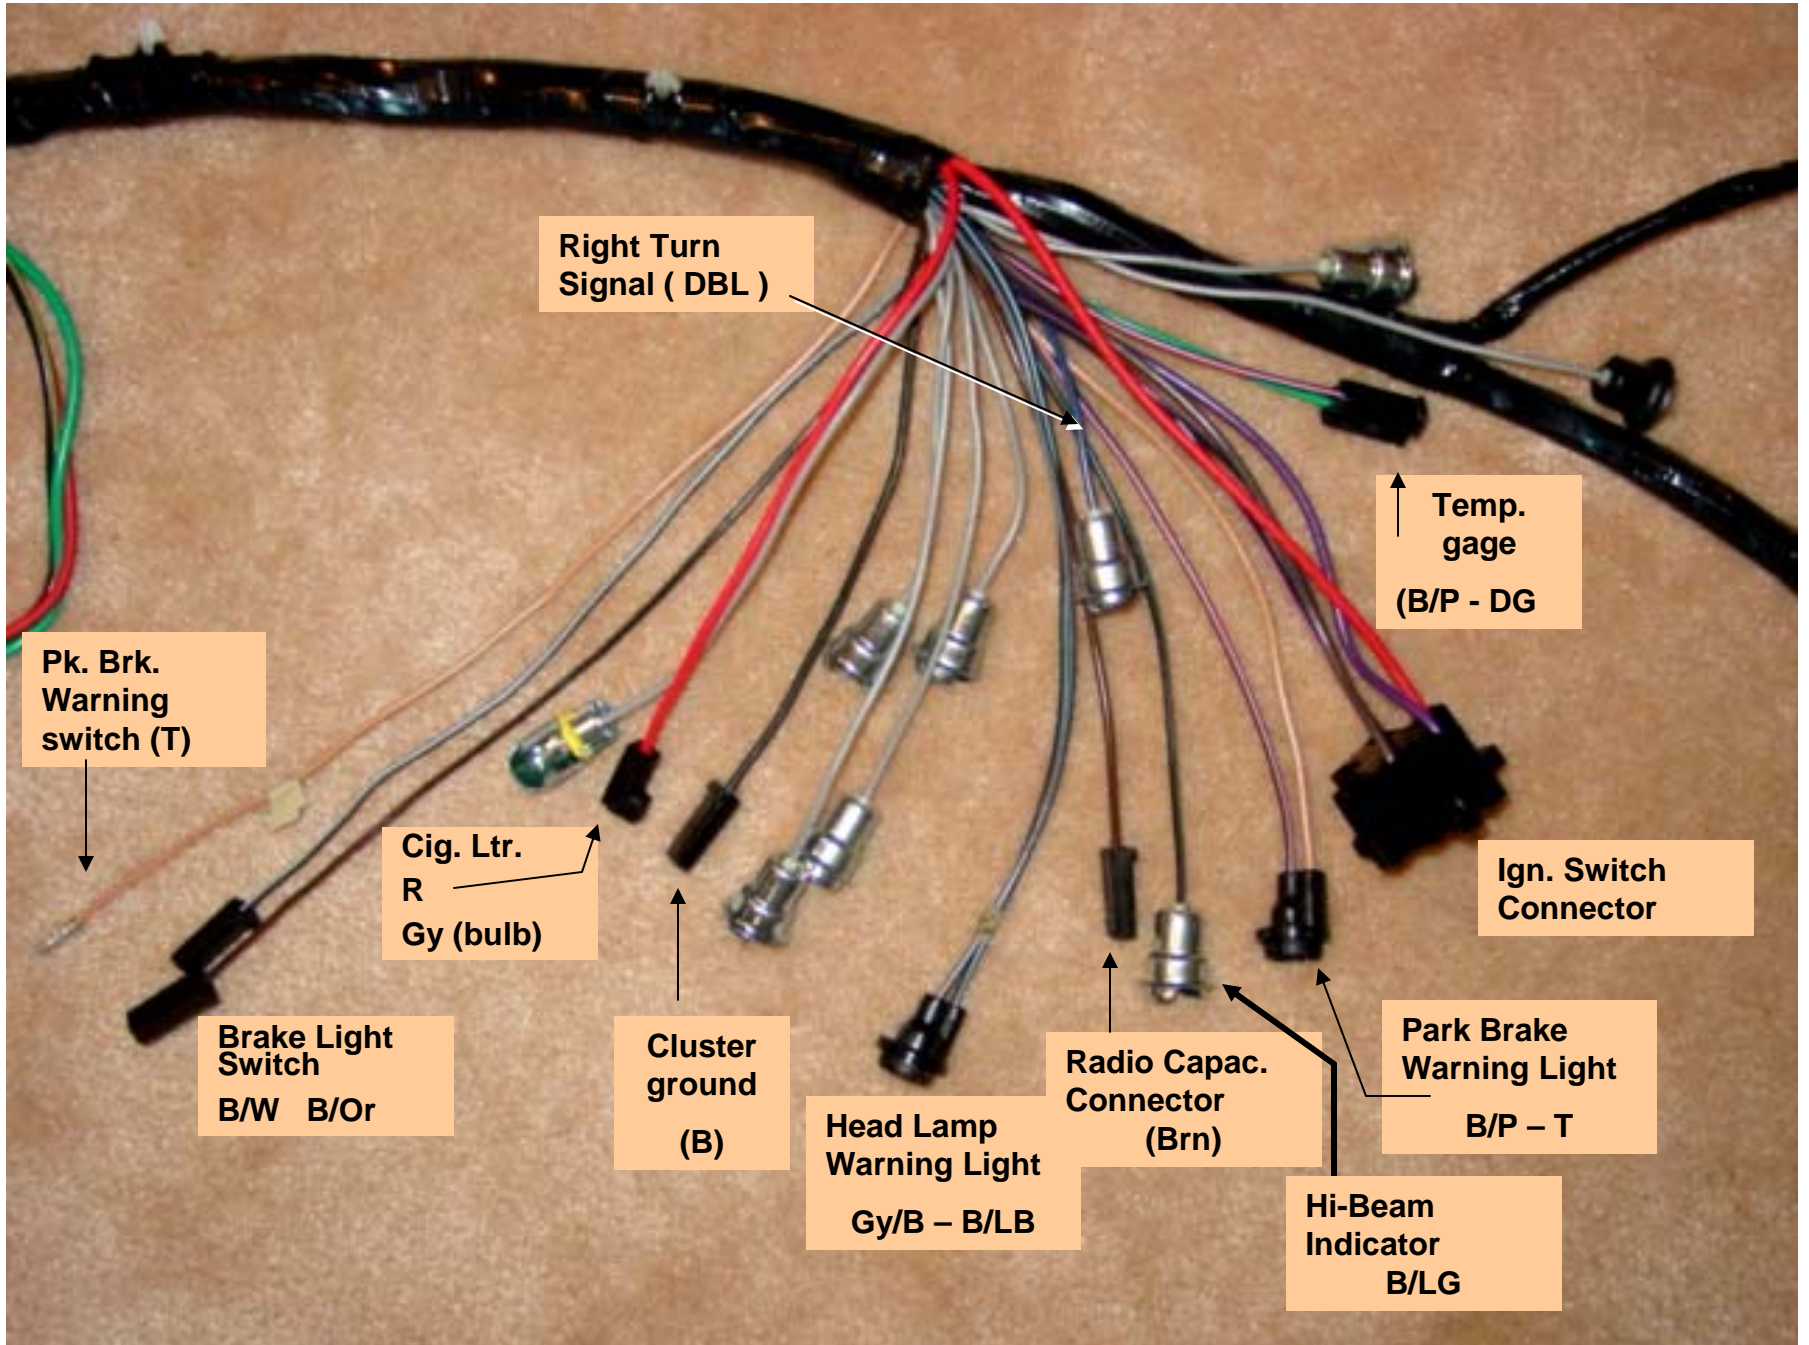

Right Turn  
Signal ( DBL )

Temp.  
gage  
(B/P - DG)

Pk. Brk.  
Warning  
switch (T)

Cig. Ltr.  
R  
Gy (bulb)

Ign. Switch  
Connector

Brake Light  
Switch  
B/W B/Or


Cluster  
ground  
(B)

Head Lamp  
Warning Light  
Gy/B - B/LB

Radio Capac.  
Connector  
(Brn)

Park Brake  
Warning Light  
B/P - T

Hi-Beam  
Indicator  
B/LG

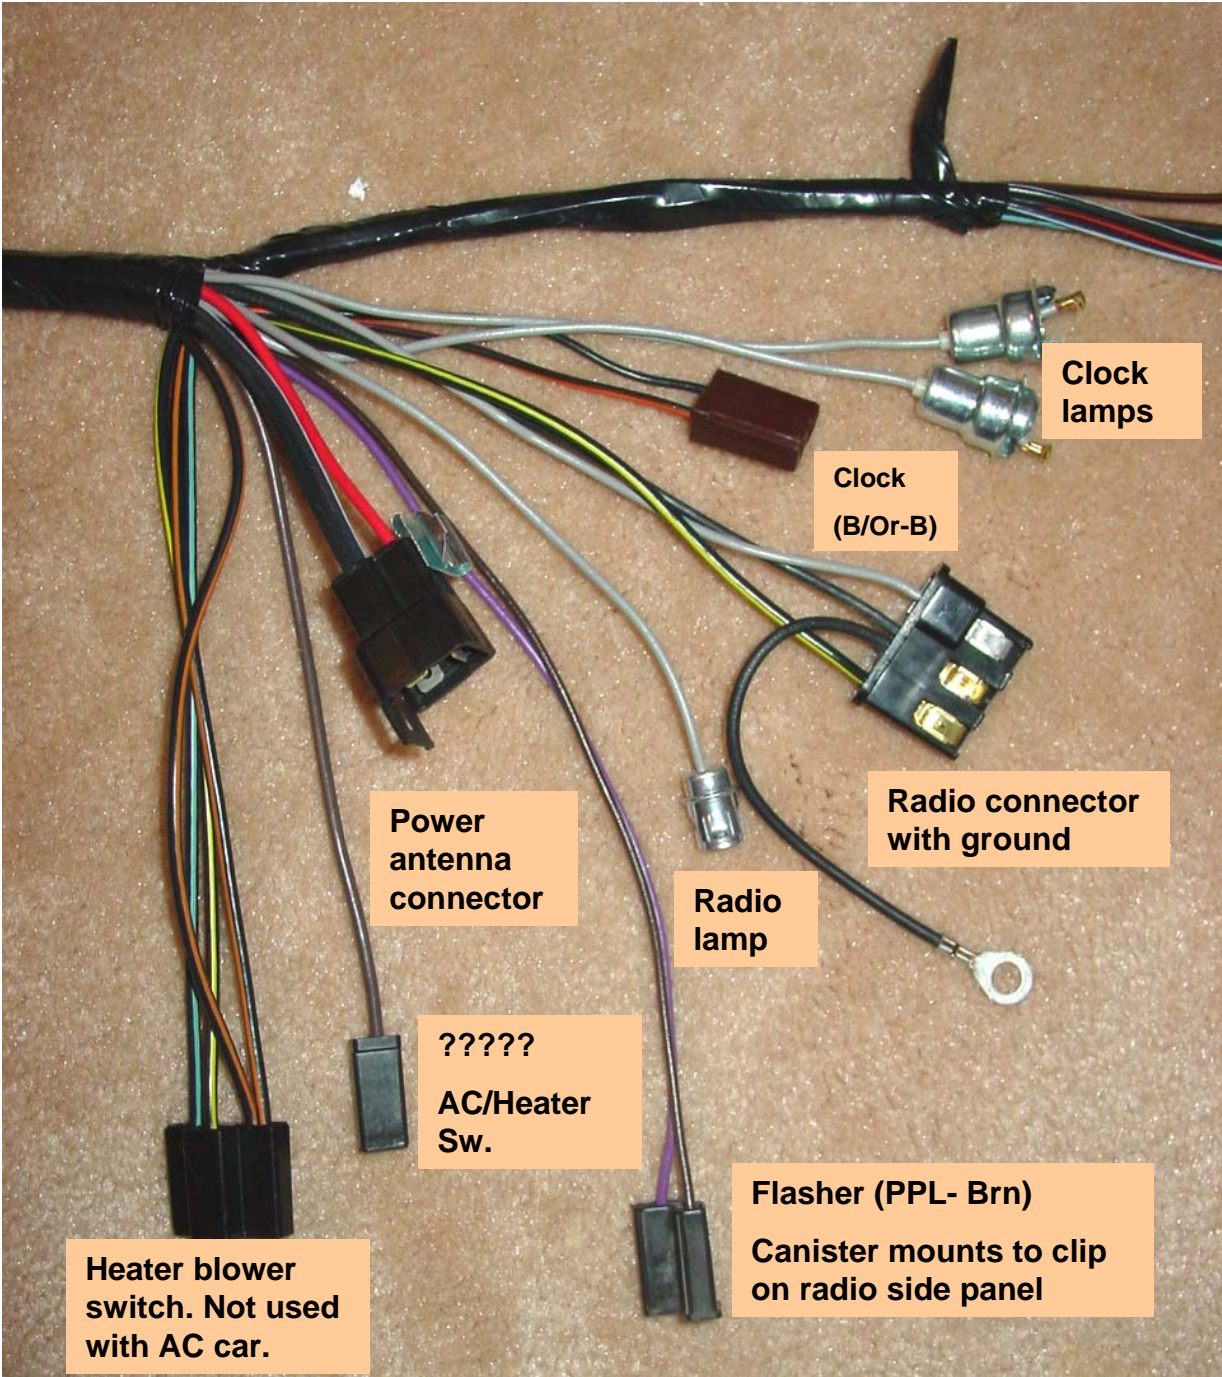

Heater blower switch. Not used with AC car.

Power antenna connector

?????  
AC/Heater Sw.

Radio lamp

Flasher (PPL- Brn)  
Canister mounts to clip on radio side panel

Radio connector with ground

Clock (B/Or-B)

Clock lamps




**Ballast  
Resistor Lower  
B/P**

**Washer Pump  
Brn - DBL**


**Back-up Lamp  
Switch conn.  
B/P - B/DG**

**From Dash Harness  
thru firewall**

**Windshield Wiper Motor  
B/Y, Brn, B/LB**

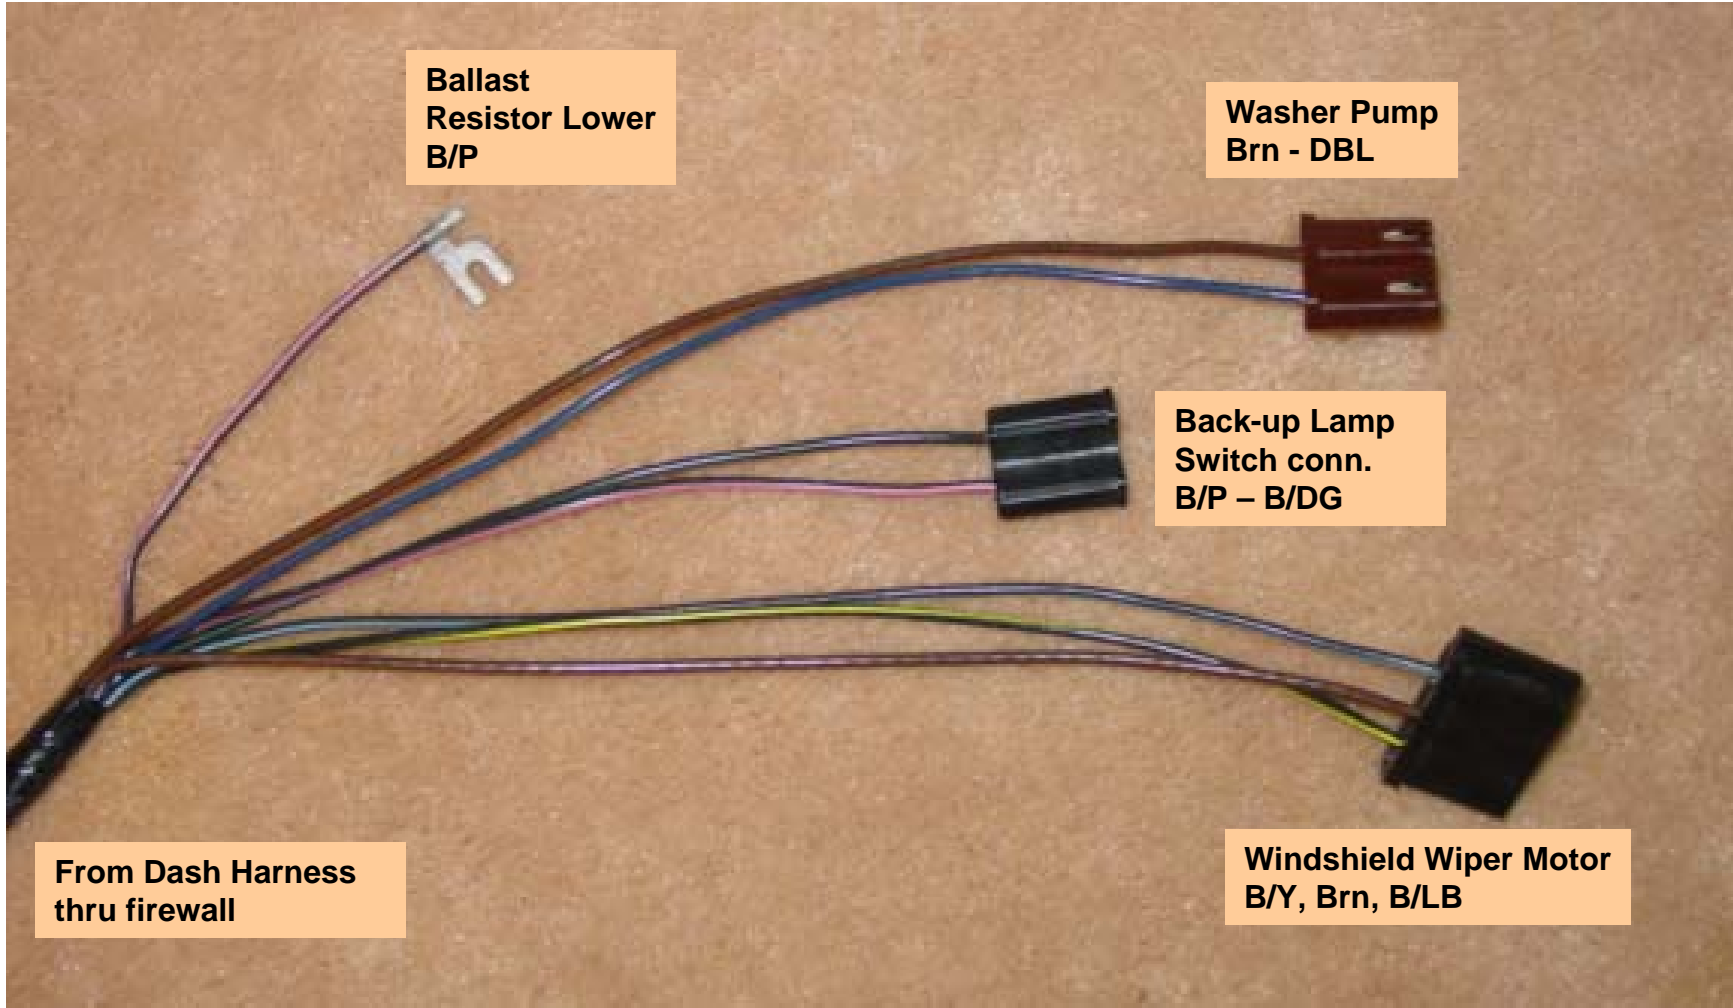

## Far right end of dash harness

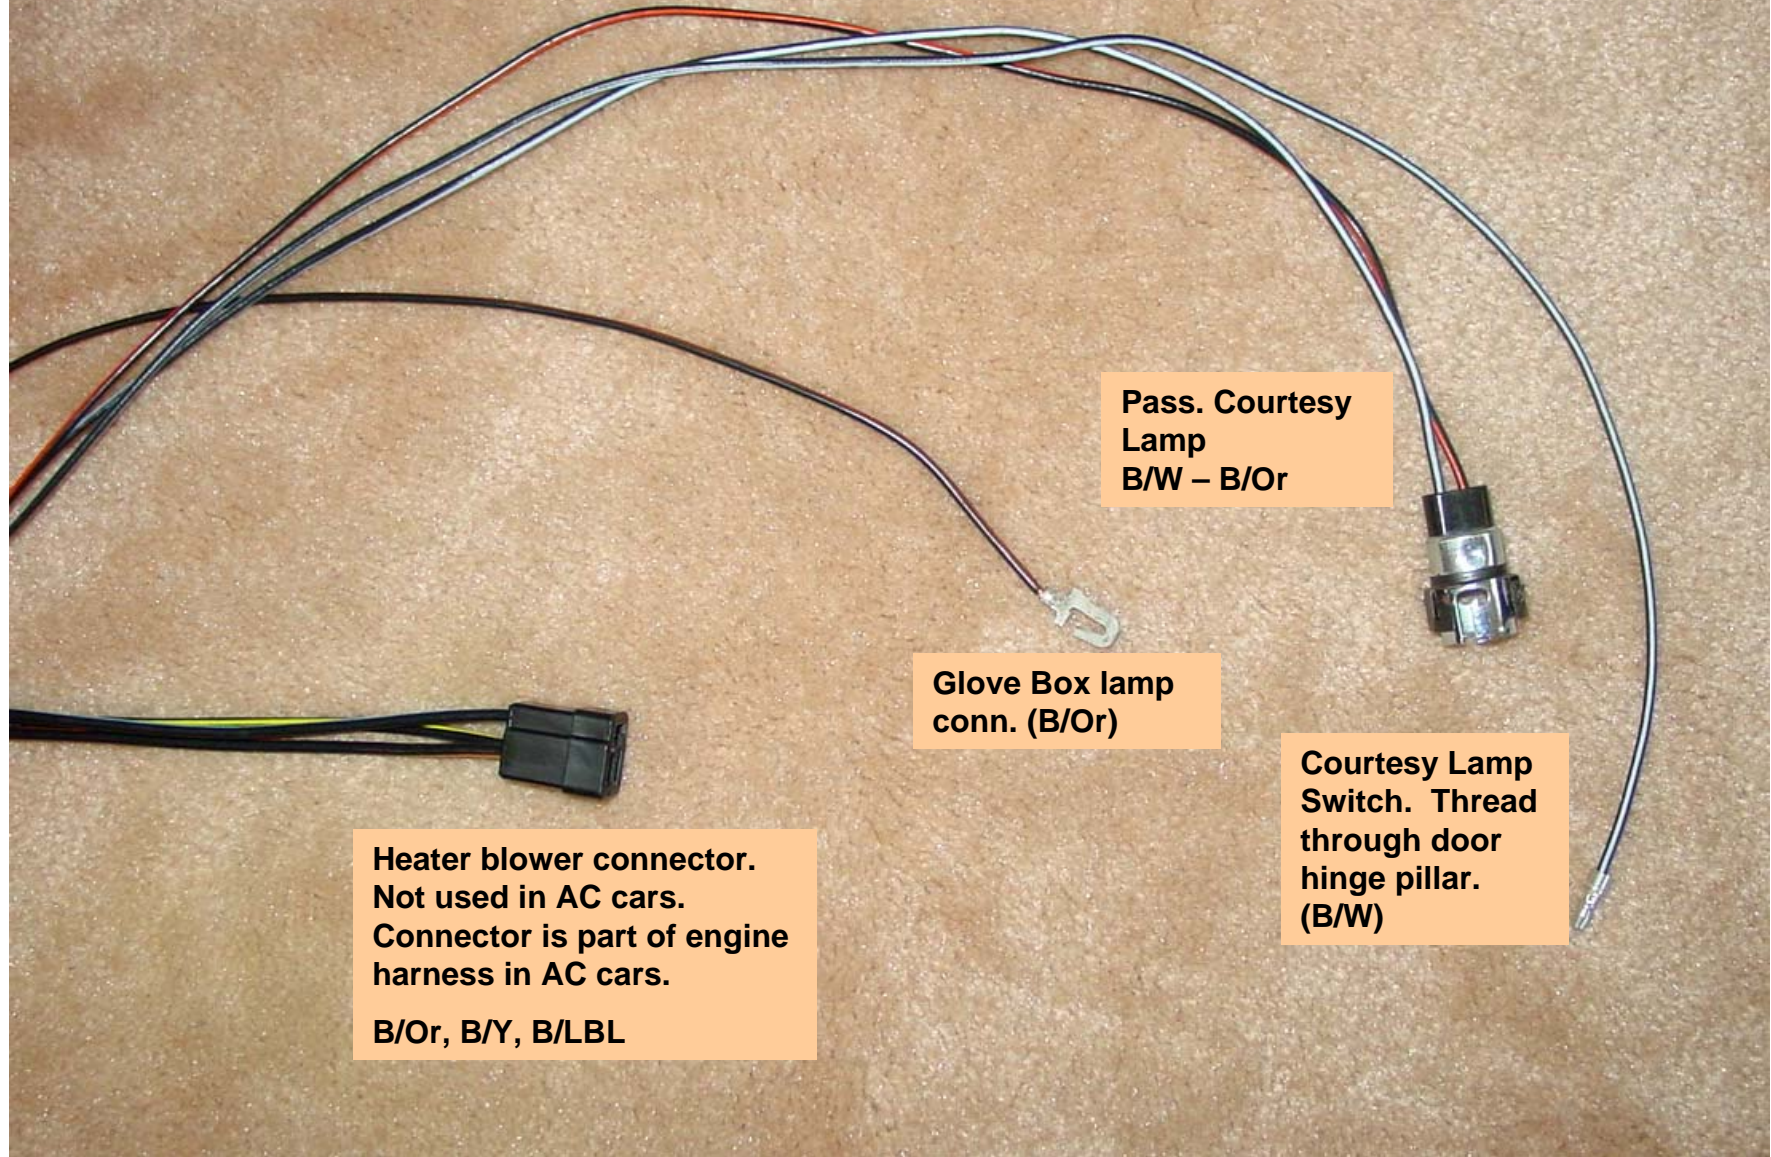

Heater blower connector.  
Not used in AC cars.  
Connector is part of engine  
harness in AC cars.

B/Or, B/Y, B/LBL

Glove Box lamp  
conn. (B/Or)

Pass. Courtesy  
Lamp  
B/W – B/Or

Courtesy Lamp  
Switch. Thread  
through door  
hinge pillar.  
(B/W)