

03-06-95  
YT0835E2

**CHART C**

**"SERVICE ASR" INDICATOR "ON" WITH NO DTC(s) SET**


**Chart Test Description:**

Number(s) below refer to circled number(s) on the diagnostic chart.


1. Confirms that a malfunction condition exists.
2. Checks if the malfunction is due to a DTC setting condition.
3. Determines whether the malfunction is due to an indicator low side circuit short to ground or an EBTCM circuit malfunction.
4. Checks for damage to the shorting bar in the EBTCM and/or EBTCM harness connector.

# CHART C

## "SERVICE ASR" INDICATOR "ON" WITH NO DTCs SET

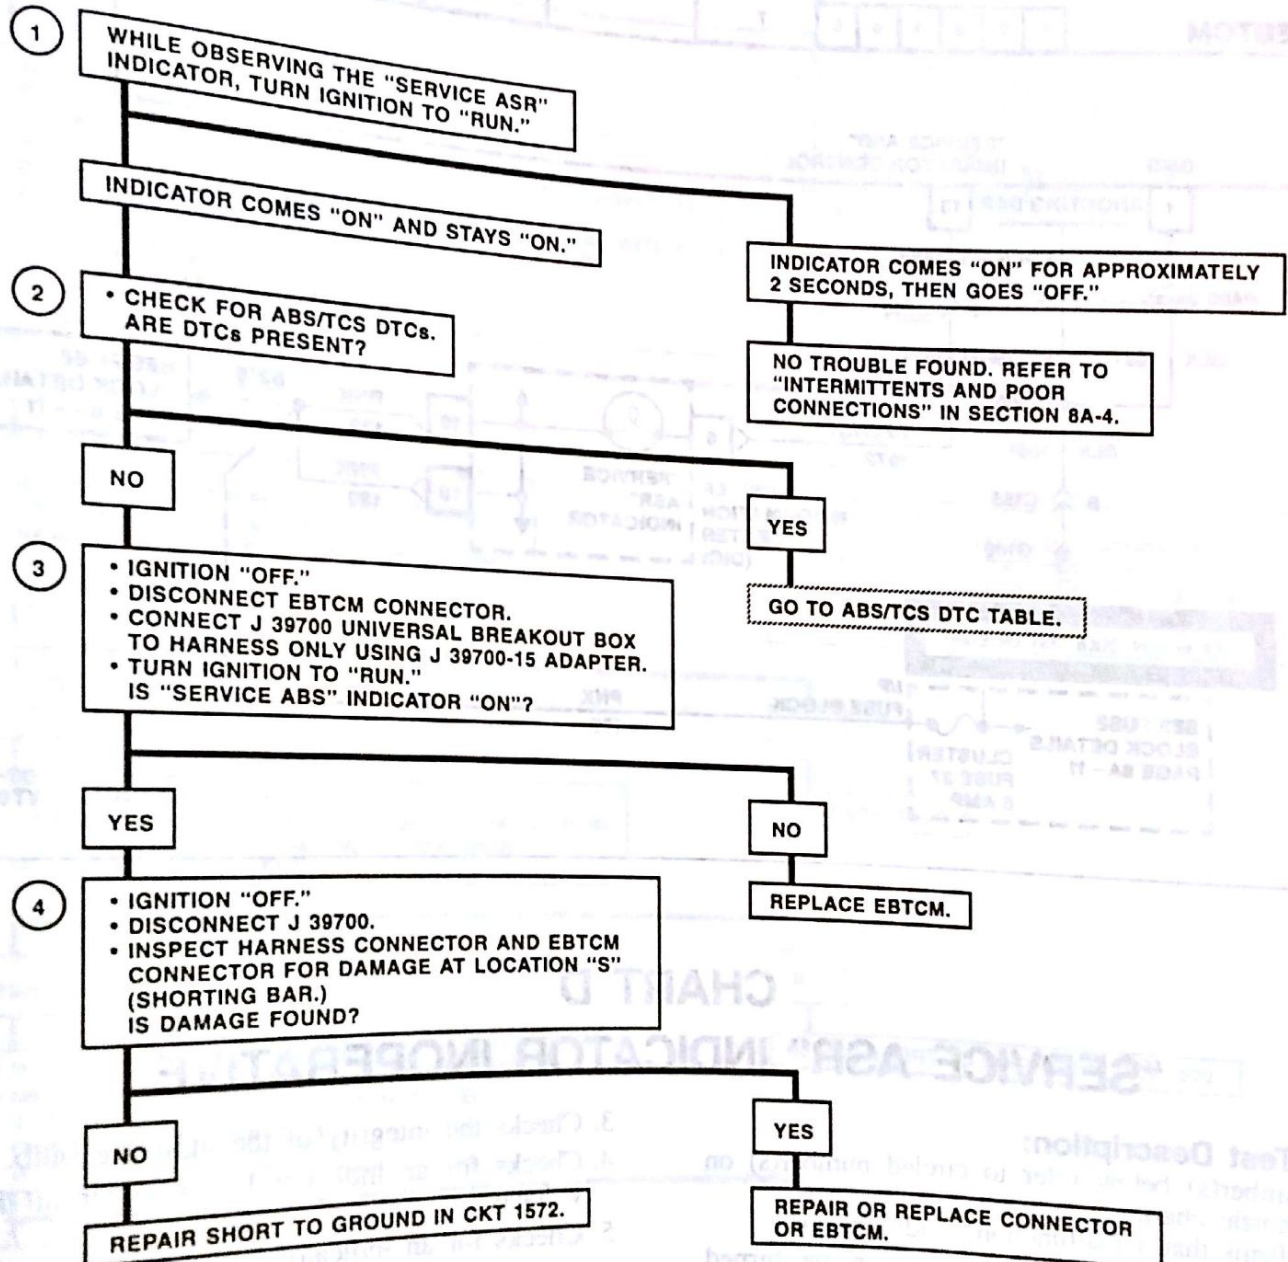

WHEN ALL DIAGNOSIS AND REPAIRS ARE COMPLETED, CLEAR DTCs AND VERIFY PROPER OPERATION.

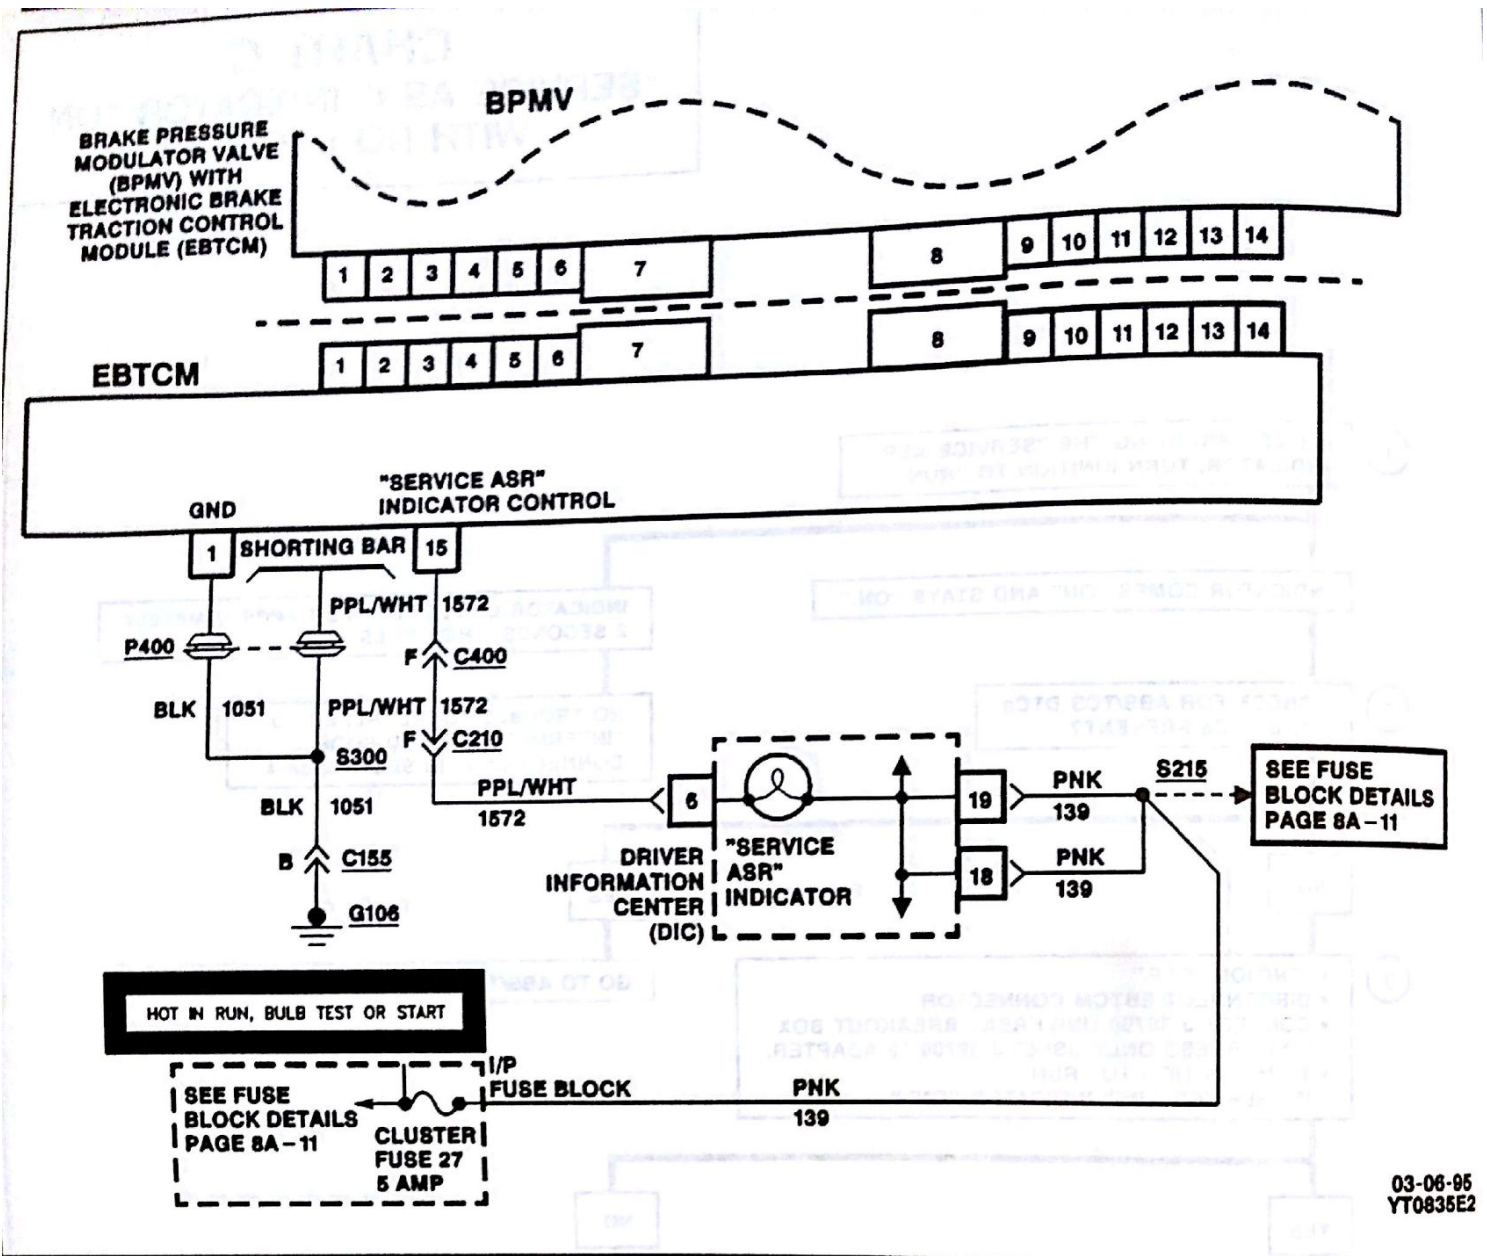

## CHART D

### "SERVICE ASR" INDICATOR INOPERATIVE

#### Chart Test Description:

Number(s) below refer to circled number(s) on the diagnostic chart.

1. Confirms that a malfunction condition exists.
2. Checks to see if the indicator can be turned "ON" manually.

3. Checks the integrity of the indicator bulb.
4. Checks for an indicator low side circuit short voltage.
5. Checks for an indicator low side circuit open.