

## Heater Core Removal

– Refer to Section 8C; remove or disconnect

1 Instrument panel upper trim pad (8C-14)

2 Drain cooling system

Console Side Trim Panel (8C-19)

Lower Trim Panel

Lower Trim Panel Support (8C-23 F33 I5)

3 In-vehicle temperature sensor aspirator hose (plug in hose)

4 In-vehicle temperature sensor connector (8C-20 F 27 I1, 8A-201 F4)

5 Floor heat defector screws (on Lower Trim Panel Support)

6 Right-hand knee bolster brace (loosen bracket; remove passenger knee bolster brace in steps 15, 17)

7 Floor heat deflector

8 Relays from multi-use relay bracket (8A-201-13, 8A-201-9)

9 Loosen nuts retaining (I/P) wiring harness retainer (bracket) to radio receiver (8A-201-14, 8C-24 F 34, 9A-6 F4)

10 Slide (I/P) wiring harness retainer (bracket) from radio receiver

11 Remove harnesses from (I/P) wiring harness retainer (bracket)

12 (I/P) Wiring harness retainer (bracket) (8A-201-14, 8C-24 F 34)

13 Plastic I/P Carrier nuts from right-hand pillar (8C-15 F20 I 21) see steps 17 and 21

14 Multi-use relay bracket (8C-15 F20 I 12)

15 Passenger knee bolster brace attachments

16 Remove side window defroster rosebud clip (plastic 7 adjustable strap retainer) and duct hose from knee bolster brace (bracket 8C-15 F20 I 20, 8C-21 F30 I1)

17 Pull carrier back and remove passenger knee bolster brace. (bracket)

18 Disconnect electrical connections from radio receiver. (8C-24 F34 I4, 8A-201-14) 8C

19 Multi-use relay bracket and disconnect cruise control module electrical connection. (8C-24 F34 I4, 8C-15 F20 I 12, 8A-201-14)

- 20 Screws attaching window defroster duct to rear of heater case
- 21 Fuse block from carrier (8C-15 F20 I21,
- 22 Vacuum hose from actuator (RECIRC actuator ORN 8A-201-0)
- 23 Vacuum line retainer tape on heater (RECIRC actuator ORN 8A-201-0)
- 24 Harness from retainer clip on bottom of rear heater case (RECIRC actuator ORN 8A-201-0)
- 25 Side window defroster duct (center) extension (inside heater case, snap on).
- 26 Rear heater case screw and rear heater case half. (8A-201-0 F1) 3 bolts 2 screws??
- 27 Heater hoses from heater core. (outside under high fill reservoir)
- 28 Heater core from case. (check for bracket on core)

Air Distributor Duct 8C-29

Radio Receiver 8C-16 -9A -5 8C-24 F34