

1992 corvette heater core and blend door switch

1B-30 heater core removal

Remove instrument panel upper trim pad (section 8C-22)

Remove lower trim panel-RH (8C-34)

IP side trim panel

Remove screw mounting lower trim panel to support and IP

Remove courtesy lamp harness connector

Remove fuse box cover and side trim panel

Remove inst panel compartment (8C-22)

Remove screws from compartment lower hinge and latch

Remove IP compartment from upper trim pad

Remove electrical harness from compartment lamp switch

Remove Outer air outlet –RH (8C-41)

Remove screws from grill outlet to IP

Pull outlet straight out

Remove center air outlet (8C-39)

Remove screws mounting outlet assy to the IP carrier

Remove center air outlet

Remove console trim plate (8C-11)

Remove shifter button by prying it up

Remove Snap ring and shift knob

Remove rear trim plate screws and screw under cup holder mat

Remove IP harness for lighter, rear compartment release switch and gear indicator lamp

Unclip accy plug harness

Remove console trim plate

Remove accessory trim plate (8C-8)

Remove Console trim plate (previously accomplished)

Remove center air outlet (previously accomplished)

Remove screws from accy trim plate to IP

Remove trim plate

Remove outer air outlet – LH (8C-41)

Remove screws from grill outlet to IP

Pull outlet straight out

Remove windshield defroster grill (8C-42 [See Sun Load Sensor( 8C-36)])

Pry up on rear edge of grill to clear tabs from upper trim panel and tip forward

Remove electrical harness from sensor

Remove sensor ¼ turn

Remove bolts and screws mounting upper trim pad to IP and bulkhead (see fig 31)

Remove upper trim pad by pulling pad rearward and upward

Drain cooling system

Remove in vehicle temp sensor aspirator hose

Remove in vehicle temp sensor connector

Remove floor heat deflector screws

Remove right hand knee bolster brace

Remove floor heat deflector

Remove relays from multi use relay bracket

Loosen nuts retaining wiring harness retainer to radio receiver

Slide wiring harness retainer from radio receiver

Remove harness from wiring harness retainer

Remove wiring harness retainer

Remove carrier nuts from right hand pillar

Remove multi use relay bracket

Remove passenger knee bolster brace attachments (Section 8C-27)

Remove side window defroster duct rosebud clip and duct from knee bolster brace

Pull carrier back and remove passenger knee bolster brace

Disconnect electrical connections from radio receiver

Remove multi use relay bracket and disconnect cruise control module electrical connection

Remove screw attaching side window defroster duct to rear of heater case

Remove fuse block from carrier

Remove vacuum hose from actuator

Remove vacuum line retainer tape from heater

Remove harness from retainer clip on bottom of rear heater case

Remove side window defroster duct (center) extension (in heater case)

Remove rear heater case screws and rear heater case half

Remove high fill reservoir

Remove heater hoses from heater core

Remove heater case from core