



# Transmission Control Lever Knob Replacement

## Removal Procedure

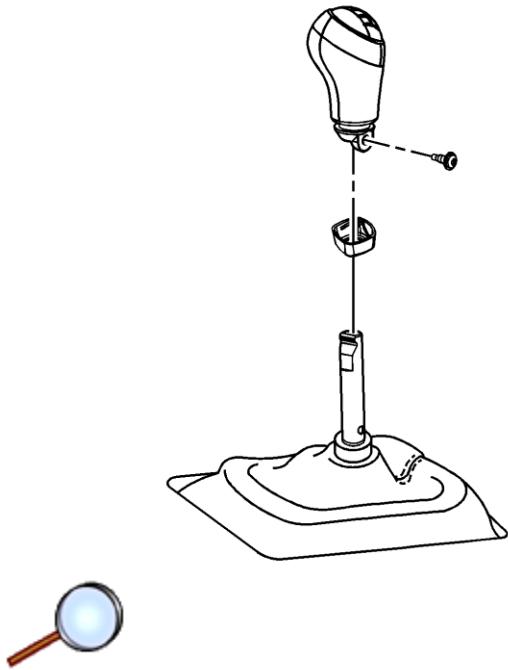

1. Carefully remove the shift control knob trim ring by turning counter-clockwise and pulling downward.
2. Remove the shift control knob retaining screw.
3. Remove the shift control knob.

## Installation Procedure

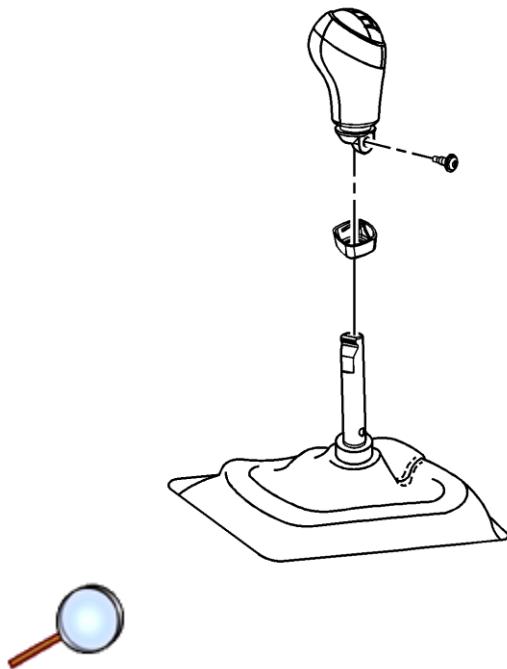

1. Install the shift control knob onto the shift control lever.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

2. Install the shift control knob retainer screw.

**Tighten**

Tighten the screw to 2 N·m (18 lb in).

3. Install the shift control knob trim ring and turn clockwise to lock into place.

© 2011 General Motors. All rights reserved.