

01-21-2008, 12:44 PM

#2

LittleJake

CF Senior Member

★★★★★



[My Corvette Photos](#)

Member Since: Jan 2006

Location: Nashville TN

Remove the four 7mm bolts from the halo that sit underneath the hatch. It is easiest if you use a 7mm open end box wrench. There are two torx screws on each side of the halo on the rear that are covered by the hatch. Remove these as well.



Once all the screws and bolts are removed gently lift the halo from the front in an upwards motion, it should start to come off the car. You can wiggle it out from under the hatch glass and slide towards the front of the car.



Reinstall by doing the opposite for removal.





There was one rubber weatherstrip that looked bonded to the rear of the halo, it was included with my new black halo so I didn't have to take it apart. There was also one rubber weatherstrip that sat underneath the halo that was also included with my new black halo so I didn't have to take it apart as well. In some directions I have seen these can be removed and reused if they are taken apart gently. To buy them new I have seen quotes of \$36.00 from the dealership.

If you need anything else or have any questions please feel free to email or send a PM... good luck!



Close this window