

Wheel Alignment Specifications

Suspension	Camber	Camber Cross Tolerance	Caster	Caster Cross Tolerance	Total Toe	Steering Wheel Angle	Thrust Angle
Front							
FE1/FE2/FE3	-0.45° ± 0.60°	0.00° ± 0.60°	+7.50° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
FE4	-1.00° ± 0.60°	0.00° ± 0.60°	+7.60° ± 0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
FE5	-1.00° ± 0.60±	0.00° ±0.60°	+7.70° ±0.60°	0.00° ± 0.60°	0.10° ± 0.20°	0.00° ± 3.50°	--
Rear							
FE1/FE2/FE3	-0.45° ± 0.60°	--	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°
FE4	-1.20° ± 0.60°	--	--	--	0.00° ± 0.20°	--	0.00° ± 0.20°
FE5	-1.25° ± 0.60°	--	--	--	0.10° ± 0.20°	--	0.00° ± 0.20°