



## Steering Column Trim Covers Replacement (Telescoping)

### Removal Procedure


1. Disable the SIR system. Refer to [SIR Disabling and Enabling Zone 3](#) in SIR.
2. Remove the steering wheel from the steering column. Refer to [Steering Wheel Replacement](#) .
3. Remove the tilt lever from the steering column. Refer to [Tilt Lever Replacement](#) .

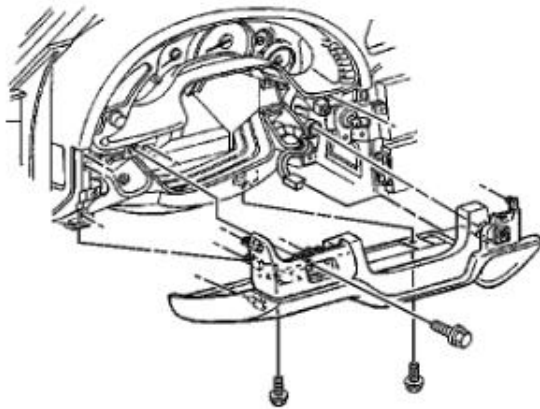

4. Remove the driver knee bolster trim panel. Refer to [Trim Panel Replacement - Knee Bolster](#) in Instrument Panel, Gages and Console.
5. Remove the 2 TORX® head screws from the lower trim cover.

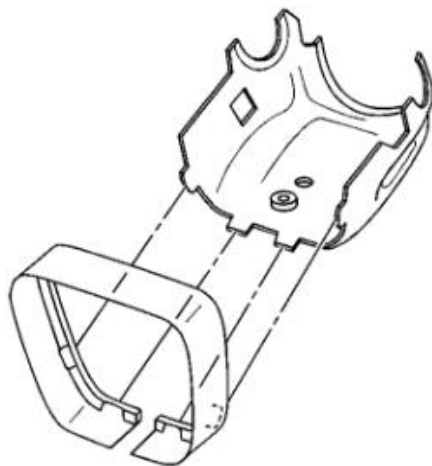


6. Separate the lower trim cover tabs from the slots in the steering column close out trim cover.
7. Remove the switch wires from the telescope motor assembly, which are routed in clips along the bottom of the lower trim cover.
8. From the inside of the lower trim cover, push out the telescope motor assembly switch.
9. Disconnect the assembly switch connector from the instrument panel wiring harness.
10. Remove the telescope motor assembly switch and wires from the trim cover.
11. Remove the lower trim cover.

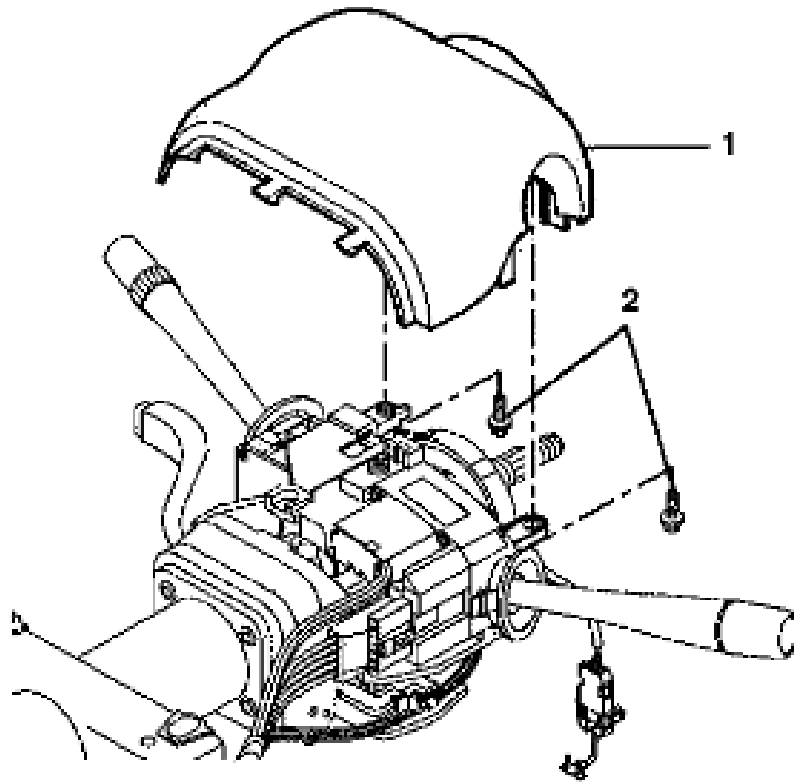

12. Remove the 2 TORX® head screws (2) from the upper trim cover (1).
13. Separate the upper trim cover tabs from the slots in the steering column close out trim cover.
14. Remove the upper trim cover (1).

## Installation Procedure

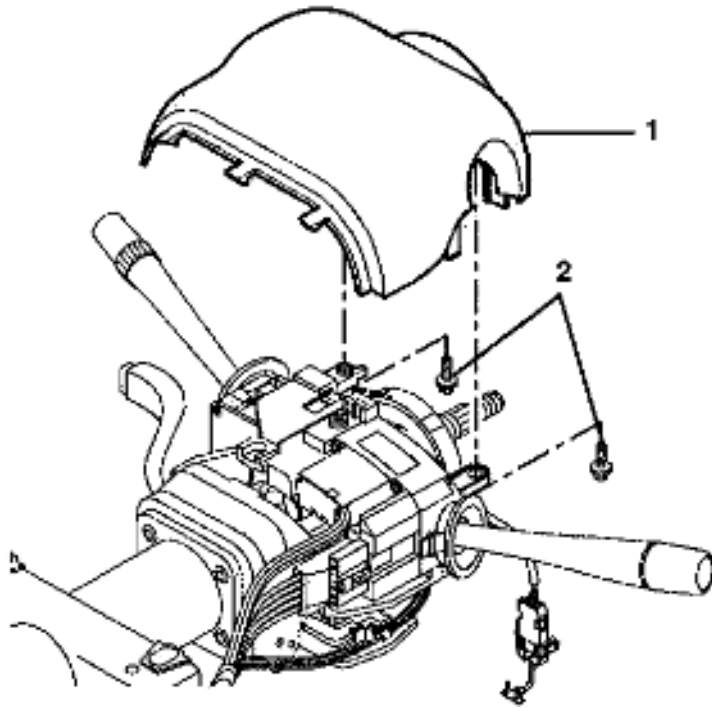


1. Install the upper trim cover to the steering column close out trim cover.
2. Verify that the tabs on the upper trim cover are fully engaged with the slots in the steering column close out trim cover.

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.


3. Secure the upper trim cover (1) with 2 TORX® head screws (2).

## Tighten

Tighten the screws to 1.5 N·m (13 lb in).

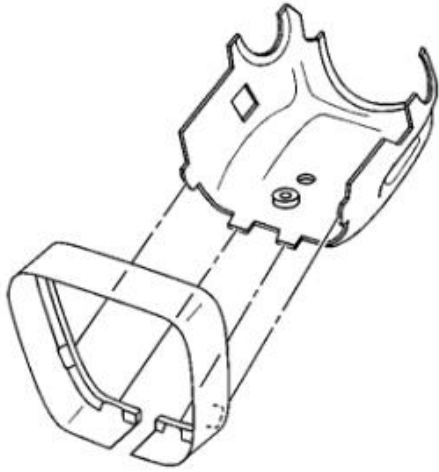


4. Install the telescope motor assembly switch and wires thorough the opening in the lower trim cover.
5. Snap the wiring to the retaining clips in the lower trim cover.
6. Route the switch wires to the telescope motor assembly along the column. Strap the wires.
7. Connect the assembly switch connector to the instrument panel wiring harness.
8. Install the lower trim cover tabs into the steering column close out trim cover.
9. Verify that the tabs on the lower trim cover are fully engaged with the slots in the steering column close out trim cover.

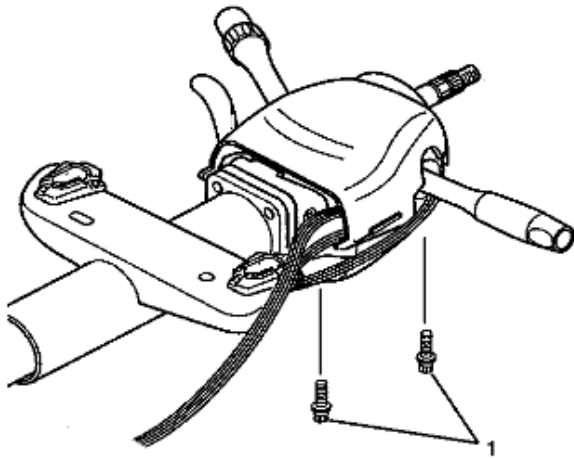

10. Install the 2 TORX® head screws (1) to the lower trim cover.

**Tighten**

Tighten the screws to 4 N·m (35 lb in).

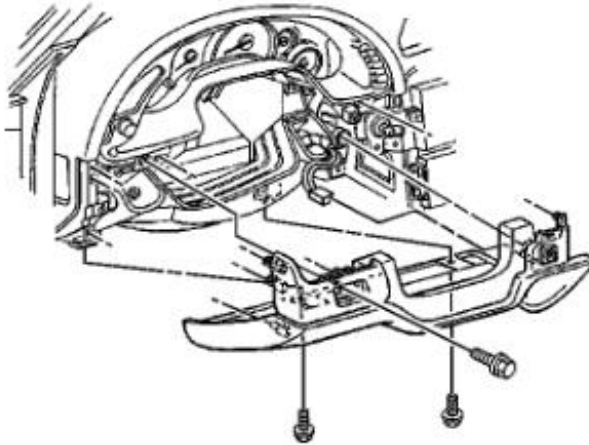

11. Install the driver knee bolster trim panel. Refer to [Trim Panel Replacement - Knee Bolster](#) in Instrument Panel, Gages and Console.
12. Install the tilt lever. Refer to [Tilt Lever Replacement](#) .
13. Install the steering wheel. Refer to [Steering Wheel Replacement](#) .
14. Enable the SIR system. Refer to [SIR Disabling and Enabling Zone 3](#) in SIR.