



## Steering Column Trim Covers Replacement (Manual)

### Removal Procedure


1. Disable the SIR system. Refer to [SIR Disabling and Enabling Zone 3](#) in SIR.
2. Remove the steering wheel from the steering column. Refer to [Steering Wheel Replacement](#) .
3. Remove the tilt lever from the steering column. Refer to [Tilt Lever Replacement](#) .

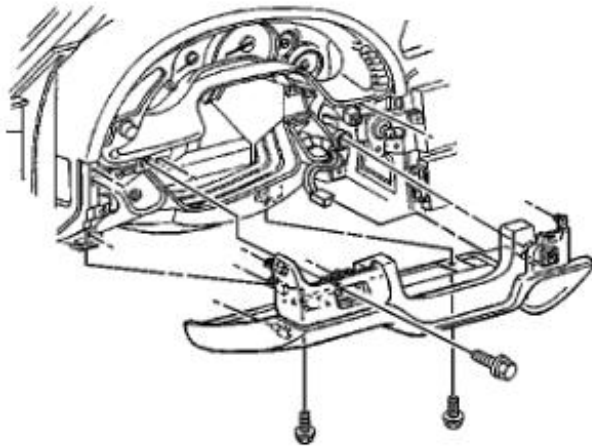

4. Remove the driver knee bolster trim panel. Refer to [Trim Panel Replacement - Knee Bolster](#) in Instrument Panel, Gages and Console.
5. Remove the 2 TORX® head screws from the lower trim cover.

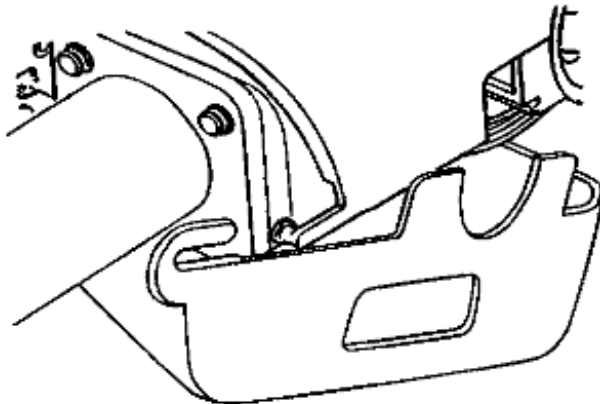


6. Perform the following steps to remove the lower trim cover:
  - A. Tilt the trim cover down.
  - B. Slide the lower trim cover back to disengage from the upper trim cover.

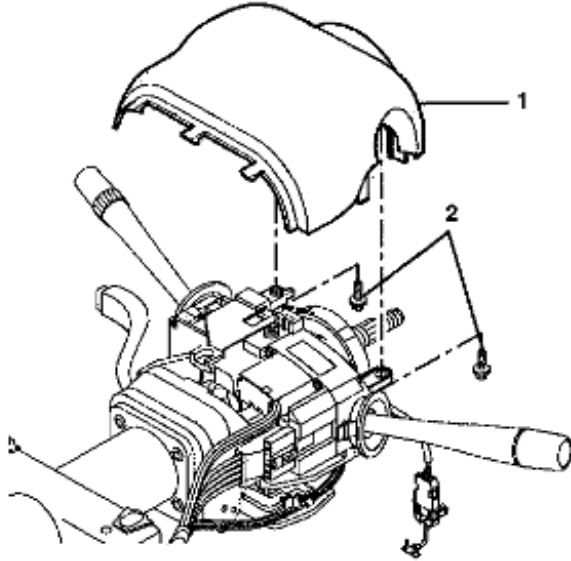

7. Remove the 2 TORX® head screws (2) from the upper trim cover (1).
8. Remove the upper trim cover (1).


**Installation Procedure**

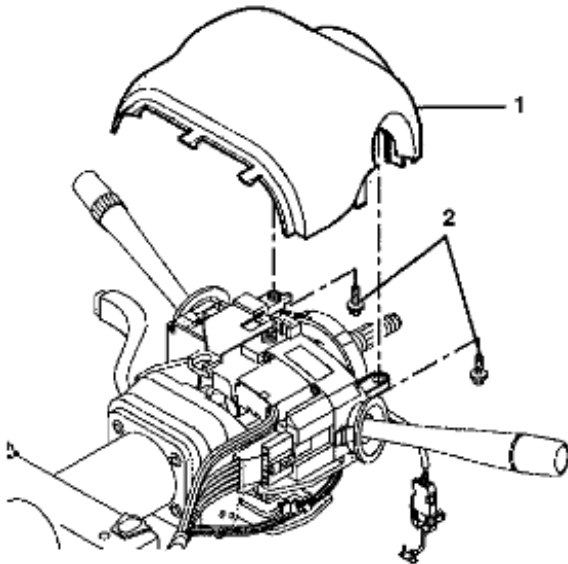


1. Install the upper trim cover.
2. Secure the upper trim cover (1) with 2 TORX® head screws (2).

**Tighten**

Tighten the screws to 1.4 N·m (12 lb in).

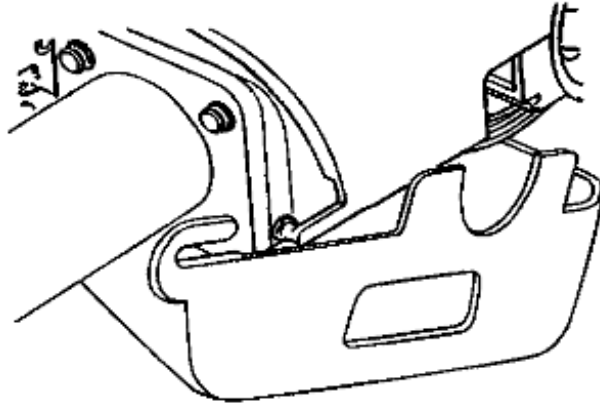


3. Perform the following steps to install the lower trim cover:
  - A. Verify that the slots on the lower trim cover engage with the tabs on the upper trim cover.
  - B. Tilt the lower trim cover up and snap the trim covers together.

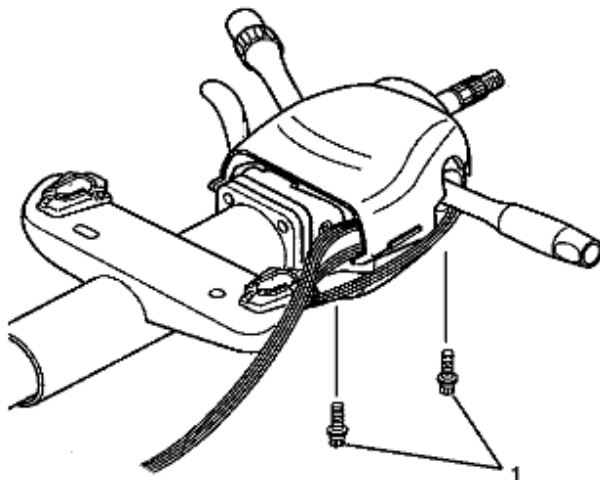

4. Install the 2 TORX® head screw (1) to the lower trim cover.

**Tighten**

Tighten the screws to 4 N·m (35 lb in).

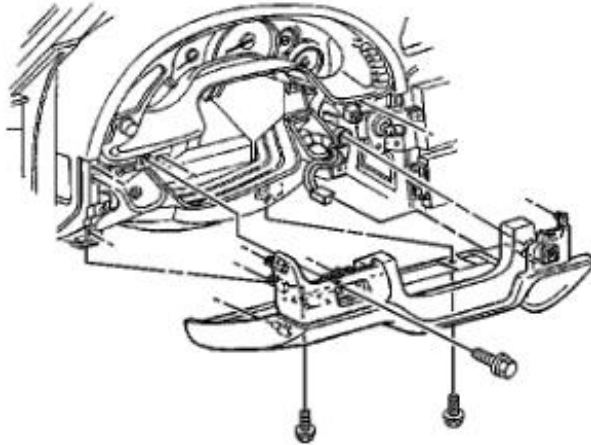

5. Install the driver knee bolster trim panel. Refer to [Trim Panel Replacement - Knee Bolster](#) in Instrument Panel, Gages and Console.
6. Install the tilt lever. Refer to [Tilt Lever Replacement](#).
7. Install the steering wheel. Refer to [Steering Wheel Replacement](#).
8. Enable the SIR system. Refer to [SIR Disabling and Enabling Zone 3](#) in SIR.