

# Repairing Shaking Windshield Rear View Mirror

## **Pre-Amble**

The mount tab on the windshield glass is a triangular shaped object. On each side of the triangle, there are three "lips" that engage pins that are on the mirror mount.

## **How To Remove Mirror from the windshield Mount**

1) Disconnect the electrical connection on the mirror by releasing the locking tab on the top.

Grab the base of the mirror (call that 6 O'clock position) that blocky looking chunk that is against the glass) and firmly rotate the base of the mirror clockwise towards the 9 o'clock position which will disengage from the windshield anchor point. It's scary the first time.



2) To fix a loose mirror, Open back of mirror mount with a #6 torx on 3 screws

3) Remove 3 OEM pins

4) Insert 3 new stainless steel spring pins (2mm) (or unbend old pins) You can use cut down drill bits of the same size to make new pins.

5) Close back of mirror mount by re-installing the 3 torx screws

- 6) Re-install mirror by placing the base of the mirror at the 9 o'clock position in relation to the windshield mount, then put a bit of pressure on base, then rotate counter clockwise to the 6 o'clock position to lock the mirror in place.

