


# Seat Lumbar Switch - Driver

## Component Connector End Views

### Seat Lumbar Switch - Driver

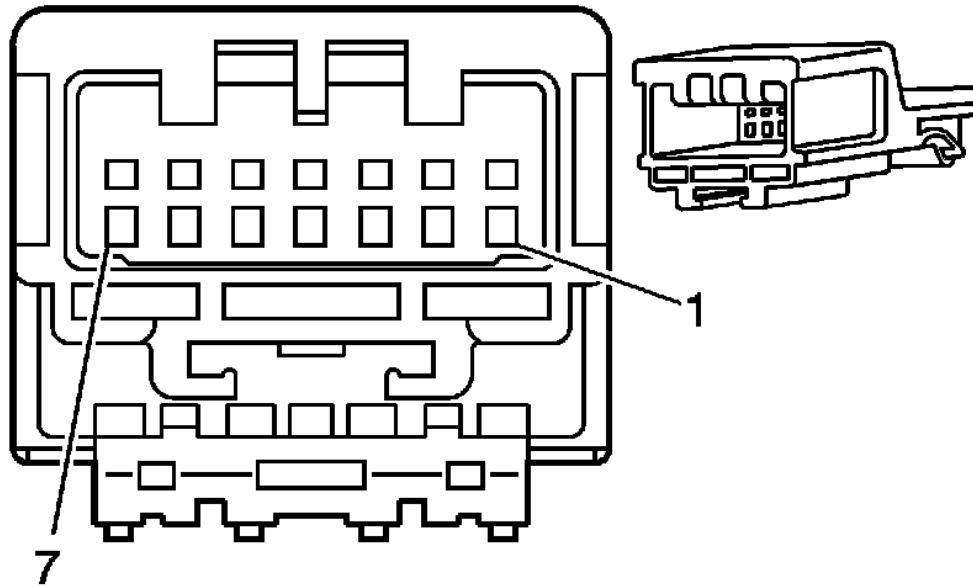

Seat Lumbar Switch - Driver

Pin	Wire	Circuit	Function
1-2	-	-	Not Used
3	0.5 GY	466	Driver Seat Bolster Deflate Control
4	0.5 YE	386	Driver Seat Lumbar Deflate Control
5	0.5 RD/WH	2240	Battery Positive Voltage
6	0.5 PU	765	Driver Seat Bolster Inflate Control
7	0.5 PK	789	Driver Seat Lumbar Inflate Control

# Lumbar Support

