

## Diagnostic Trouble Code (DTC) List - Vehicle

This master DTC list includes all applicable DTCs in alphanumeric order with descriptors.

DTC	DTC Descriptor	Module that Sets the DTC	Diagnostic Procedure
<b>Important:</b> Do NOT clear any DTCs unless instructed by a diagnostic procedure.			
<ul style="list-style-type: none"> <li>Diagnose the DTCs in the order that the DTCs appear on the scan tool or mis-diagnosis may occur.</li> </ul>			
<ul style="list-style-type: none"> <li>If multiple powertrain DTCs are stored, diagnose the DTCs in the following order:               <ol style="list-style-type: none"> <li>Component level DTCs, such as sensor DTCs, solenoid DTCs, and relay DTCs.</li> <li>System level DTCs, such as misfire DTCs, evaporative emission (EVAP) system DTCs, and fuel trim DTCs.</li> </ol> </li> </ul>			
B0001	Vehicle Speed Information Circuit Range/Performance	Navigation Radio	<a href="#">DTC B0001</a>
B0005	In Park Switch Circuit	BCM, SCLCM	<a href="#">DTC B0005</a>
B0012	Passenger Frontal Deployment Loop Stage 2 Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0013	Passenger Frontal Deployment Loop Stage 2 Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0014	Passenger Frontal Deployment Loop Stage 2 Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0016	Passenger Frontal Deployment Loop Stage 1 Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0017	Passenger Frontal Deployment Loop Stage 1 Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0018	Passenger Frontal Deployment Loop Stage 1 Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>

B0022	Driver Frontal Deployment Loop Stage 1 Resistance Low	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0024	Driver Frontal Deployment Loop Stage 1 Voltage Out of Range	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0026	Driver Frontal Deployment Loop Stage 1 Open	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0028	Right Front Side Deployment Loop Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0029	Right Front Side Deployment Loop Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0030	Right Front Side Deployment Loop Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0040	Left Front Side Deployment Loop Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0041	Left Front Side Deployment Loop Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0042	Driver Frontal Deployment Loop Stage 2 Resistance Low	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0043	Driver Frontal Deployment Loop Stage 2 Voltage Out of Range	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0044	Driver Frontal Deployment Loop Stage 2 Open	SDM	<a href="#">DTC B0022, B0024, B0026, B0042, B0043, or B0044</a>
B0045	Left Front Side Deployment Loop Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0051	Deployment Commanded	SDM	<a href="#">DTC B0051</a>
B0053	Deployment Commanded with Loop DTCs Present	SDM	<a href="#">DTC B0053</a>

B0057	Right Front Pretensioner Deployment Loop Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0058	Right Front Pretensioner Deployment Loop Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0059	Right Front Pretensioner Deployment Loop Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0064	Left Front Pretensioner Deployment Loop Resistance Low	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0065	Left Front Pretensioner Deployment Loop Open	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0066	Left Front Pretensioner Deployment Loop Voltage Out of Range	SDM	<a href="#">DTC B0012-B0019, B0027-B0030, B0039-B0041, B0045, B0046, B0056-B0076, B0085-B0089, B0106-B0114, B0118-B0124, or B3850-B3854</a>
B0077	Driver Side Impact Sensor (SIS) Performance	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0078	Passenger Side Impact Sensor (SIS) Performance	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0079	Incorrect Driver Side Impact Sensor (SIS) Installed	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0080	Discard Driver Side Impact Sensor (SIS)	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0081	Incorrect Passenger Side Impact Sensor (SIS) Installed	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0082	Discard Passenger Side Impact Sensor (SIS)	SDM	<a href="#">DTC B0077, B0078, B0079, B0080, B0081, or B0082</a>
B0083	Right Front Seat Position Sensor Circuit	SDM	<a href="#">DTC B0083 or B0084</a>
B0084	Left Front Seat Position Sensor Circuit	SDM	<a href="#">DTC B0083 or B0084</a>

B0092	Passenger Presence System Performance	SDM	<a href="#">DTC B0092</a>
B0098	Passenger Presence System Configuration Error	SDM	<a href="#">DTC B0098</a>
B0100	Front End Sensor 1 Performance	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0101	Discard Front End Sensor 1	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0102	Incorrect Front End Sensor 1 Installed	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0103	Front End Sensor 2 Performance	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0104	Discard Front End Sensor 2	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0105	Incorrect Front End Sensor 2 Installed	SDM	<a href="#">DTC B0100, B0101, B0102, B0103, B0104, or B0105</a>
B0159	Outside Air Temperature Sensor Circuit	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0164	Passenger Compartment Temperature Sensor Circuit	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0174	Output Air Temperature Sensor 1	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0179	Output Air Temperature Sensor 2	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0184	Solar Load Sensor 1 Circuit Performance	HVAC	<a href="#">DTC B0184 or B0189</a>
B0189	Solar Load Sensor 2 Circuit Performance	HVAC	<a href="#">DTC B0184 or B0189</a>
B0248	Air Flow Control 3 Circuit	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0249	Air Flow Control 3 Circuit Range	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0268	Air Flow Control 7 Circuit	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>

B0269	Air Flow Control 7 and Circuit Range	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0408	Temperature Control 1 Circuit	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0409	Temperature Control 1 Circuit Range	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0414	Temperature Control 1 Feedback Circuit Range/Performance	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0419	Temperature Control 2 Circuit Range	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0423	Temperature Control 2 Circuit	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0424	Temperature Control 2 Feedback Circuit Range/Performance	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B0510	Output Air Temperature Sensor 3	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0515	Output Air Temperature Sensor 4	HVAC	<a href="#">DTC B0159, B0164, B0174, B0179, B0510, or B0515</a>
B0976	Power Mode OFF Indicator Circuit	BCM	<a href="#">DTC B0976, B0977, or B0978</a>
B0977	Power Mode START Indicator Circuit	BCM	<a href="#">DTC B0976, B0977, or B0978</a>
B0978	Power Mode ACCESSORY Indicator Circuit	BCM	<a href="#">DTC B0976, B0977, or B0978</a>
B1000	Electronic Control Unit (ECU) Performance	DSCC, BCM, DDM, DRR, RCDLR, FTC, HUD, HVAC, IPC, PDM, Radio, SCLCM, SDM, VCIM	<a href="#">DTC B1000</a>
B1001	Option Configuration Error	BCM, DRR, Radio and VCIM	<a href="#">DTC B1001</a>

		SDM	<a href="#">DTC B1001</a>
B1004	Keep Alive Memory (KAM) Reset	Audio Amplifier, DDS, HVAC, SCLCM, VCIM	<a href="#">DTC B1004</a>
B1007	EEPROM Write Error	Audio Amplifier, DDS, DPM, FTC, SCLCM	<a href="#">DTC B1007</a>
B1009	EEPROM Checksum Mismatch	Audio Amplifier, DDS, DPM, FTC, SCLCM, VCIM	<a href="#">DTC B1009</a>
B1011	System Disabled Information Stored	DDM, PDM	<a href="#">DTC B1011</a>
		FTC	<a href="#">DTC B1011</a>
B1013	Calibration Read Only Memory (ROM) Checksum Error	HVAC	<a href="#">DTC B1013</a>
B1014	Program Read Only Memory (ROM) Checksum Error	HVAC	<a href="#">DTC B1014</a>
B1025	Audio Output Circuit Shorted to Battery or Ground	Radio	<a href="#">DTC B1025, B1035, B1045, or B1055</a>
B1259	Antenna Ground Circuit	Radio	<a href="#">DTC B1259</a>
B125A	Antenna 1 Circuit Left	Radio	<a href="#">DTC B125A or B125B</a>
B125B	Antenna 2 Circuit Right	Radio	<a href="#">DTC B125A or B125B</a>
B1271	Theft Locked	Radio	<a href="#">DTC B1271</a>
B1291	Convertible Top Fifth Bow Position	FTC	<a href="#">DTC B1291</a>
B1325	Device Power 1 Circuit Voltage	BCM	<a href="#">DTC B1325</a>
B1327	Device Power 1 Circuit Low	Audio Amplifier, DRR, DPM, FTC, HVAC, SDM, SCLCM, VCIM, DDS	<a href="#">DTC B1327</a>
B1328	Device Power 1 Circuit High	Audio Amplifier, FTC, HVAC, SCLCM, SDM	<a href="#">DTC B1328</a>
B1336	Device Power 3 Circuit Range/Performance	DPM/MSM	<a href="#">DTC B1336</a>
B1370	Device Ignition 1 Circuit	RCDLR	<a href="#">DTC B1370</a>

B1420	Device Voltage	DDM, PDM	<a href="#">DTC B1420</a>
		DPM/MSM	<a href="#">DTC B1420</a>
		FTC	<a href="#">DTC B1420</a>
B1440	Power Mode Master Input Circuits Mismatch	RCDLR	<a href="#">DTC B1440</a>
B1451	Accessory Power Circuit	BCM	<a href="#">DTC B1451</a>
B1474	Right Front Exterior Door Handle Switch Circuit	DDM, PDM, RCDLR	<a href="#">DTC B1474, B2966, B2981, B3848, or B3849</a>
B1480	Battery Rundown Protection Circuit	BCM	<a href="#">DTC B1480</a>
B1580	Left Front Mirror Horizontal Position Sensor Circuit	DDM, PDM	<a href="#">DTC B1580 or B1590</a>
B1590	Left Front Mirror Vertical Position Sensor Circuit	DDM, PDM	<a href="#">DTC B1580 or B1590</a>
B1600	Mirror Motor 1 Circuit	DDM, PDM	<a href="#">DTC B1600 or B1605</a>
B1605	Mirror Motor 2 Circuit	DDM, PDM	<a href="#">DTC B1600 or B1605</a>
B1697	Mirror Left-Up Control Switch Circuit Low	DDSA	<a href="#">DTC B1697, B1702, B1707, or B1712</a>
B1702	Mirror Left-Down Control Switch Circuit Low	DDSA	<a href="#">DTC B1697, B1702, B1707, or B1712</a>
B1707	Mirror Right-Up Control Switch Circuit Low	DDSA	<a href="#">DTC B1697, B1702, B1707, or B1712</a>
B1712	Mirror Right-Down Control Switch Circuit Low	DDSA	<a href="#">DTC B1697, B1702, B1707, or B1712</a>
B1717	Mirror Power Fold Control Switch Circuit Low	DDSA	<a href="#">DTC B1717</a>
B1735	Seat Front Up Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1740	Seat Front Down Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1745	Seat Rear Up Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1750	Seat Rear Down Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>

B1755	Seat Assembly Horizontal Forward Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1760	Seat Assembly Horizontal Rearward Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1815	Seat Recline Forward Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1820	Seat Recline Rearward Switch Circuit	DPM/MSM	<a href="#">DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</a>
B1825	Seat Recline Position Sensor Circuit	DPM/MSM	<a href="#">DTC B1825, B1850, B2355, B2365, or B2375</a>
B1826	Seat Recline Position Sensor Circuit Range/Performance	DPM/MSM	<a href="#">DTC B1826, B1851, B1861, B2356, B2366, or B2376</a>
B2355	Seat Front Vertical Position Sensor Circuit	DPM/MSM	<a href="#">DTC B1825, B1850, B2355, B2365, or B2375</a>
B2356	Seat Front Vertical Position Sensor Circuit Range/Performance	DPM/MSM	<a href="#">DTC B1826, B1851, B1861, B2356, B2366, or B2376</a>
B2365	Seat Rear Vertical Position Sensor Circuit	DPM/MSM	<a href="#">DTC B1825, B1850, B2355, B2365, or B2375</a>
B2366	Seat Rear Vertical Position Sensor Circuit Range/Performance	DPM/MSM	<a href="#">DTC B1826, B1851, B1861, B2356, B2366, or B2376</a>
B2375	Seat Assembly Horizontal Position Sensor Circuit	DPM/MSM	<a href="#">DTC B1825, B1850, B2355, B2365, or B2375</a>
B2376	Seat Assembly Horizontal Position Sensor Circuit Range/Performance	DPM/MSM	<a href="#">DTC B1826, B1851, B1861, B2356, B2366, or B2376</a>
B2455	Cellular Phone Microphone Circuit	VCIM	<a href="#">DTC B2455</a>
B2461	Navigation ECU Synchronous Signal Error	Navigation Radio	<a href="#">DTC B2461</a>
B2462	Global Positioning System (GPS) Signal Error	Navigation Radio	<a href="#">DTC B2462</a>
B2470	Cellular Phone Antenna Circuit	VCIM	<a href="#">DTC B2470</a>
B2474	Navigation Display Head Backlighting Performance	Navigation Radio	<a href="#">DTC B2474</a>
B2476	Cellular Phone Select Service Switch	VCIM	<a href="#">DTC B2476 or B2482</a>
B2482	Cellular Phone Select Service Switch Performance	VCIM	<a href="#">DTC B2476 or B2482</a>



B2483	Global Positioning System (GPS) Sensor Circuit Low	VCIM	<a href="#">DTC B2483 or B2484</a>
B2484	Global Positioning System (GPS) Sensor Circuit Open	VCIM	<a href="#">DTC B2483 or B2484</a>
B2485	Wireless Communication Antenna Circuit	VCIM	<a href="#">DTC B2485</a>
B2510	Steering Column Lock Motor Unlock Circuit	SCLCM	<a href="#">DTC B2510</a>
B2515	Steering Column Lock Motor Feedback Circuit	SCLCM	<a href="#">DTC B2515</a>
B2517	Left Front Door Latch Circuit	DDM, PDM	<a href="#">DTC B2517 or B2518</a>
B2518	Right Front Door Latch Circuit	DDM, PDM	<a href="#">DTC B2517 or B2518</a>
B2530	Front Foglamps Control Circuit	BCM	<a href="#">DTC B2530</a>
B2540	Rear Foglamps Control Circuit	BCM	<a href="#">DTC B2540</a>
B2580	Headlamp High Beam Control Circuit	BCM	<a href="#">DTC B2580</a>
B2585	Park Lamp Control Circuit	BCM	<a href="#">DTC B2585</a>
B2646	Ambient Light Sensor Circuit Performance	HVAC	<a href="#">DTC B2646</a>
B2710	Gearshift Lock Circuit	RCDLR	<a href="#">DTC B2710</a>
B2750	Horn Relay Coil Circuit	BCM	<a href="#">DTC B2750</a>
B2757	Memory 1 Select Switch Circuit Low	DDM	<a href="#">DTC B2757, B2762, B2767, or B2772</a>
B2762	Memory 2 Select Switch Circuit Low	DDM	<a href="#">DTC B2757, B2762, B2767, or B2772</a>
B2853	Telescope Forward Switch Circuit High	DPM/MSM	<a href="#">DTC B2853, B2858, B2873, or B2878</a>
B2858	Telescope Rearward Switch Circuit High	DPM/MSM	<a href="#">DTC B2853, B2858, B2873, or B2878</a>
B2860	Telescope Position Sensor	DPM/MSM	<a href="#">DTC B2860</a>
B2897	Steering Column Lock Motor Lock Circuit	SCLCM	<a href="#">DTC B2897</a>
B2907	Steering Column Lock Motor Enable Relay Circuit	BCM, SCLCM	<a href="#">DTC B2907</a>
B2910	Steering Column Lock Password Incorrect	SCLCM	<a href="#">DTC B2910</a>
B2966	Left Front Door Handle Switch Circuit	DDM, PDM, RCDLR	<a href="#">DTC B1474, B2966, B2981, B3848, or B3849</a>

B2981	Right Front Door Handle Switch Circuit	DDM, PDM, RCDLR	<a href="#">DTC B1474, B2966, B2981, B3848, or B3849</a>
B3089	Content Theft System Intrusion Sensor Signal Circuit	BCM	<a href="#">DTC B3089</a>
B3119	Keyless Entry Antenna 1 Performance	RCDLR	<a href="#">DTC B3119</a>
B3120	Keyless Entry Antenna 2 Performance	RCDLR	<a href="#">DTC B3120</a>
B3121	Keyless Entry Antenna 3 Performance	RCDLR	<a href="#">DTC B3121</a>
B3122	Keyless Entry Antenna 4 Performance	RCDLR	<a href="#">DTC B3122</a>
B3142	Left Front Unlock Switch Circuit Low	DDSA	<a href="#">DTC B3142 or B3152</a>
B3145	Right Front Unlock Switch Circuit Low	PDM	<a href="#">DTC B3145 or B3155</a>
B3152	Left Front Lock Switch Circuit Low	DDSA	<a href="#">DTC B3142 or B3152</a>
B3155	Right Front Lock Switch Circuit Low	PDM	<a href="#">DTC B3145 or B3155</a>
B3170	Right Front Window Up Switch Circuit	PDM	<a href="#">DTC B3170, B3175, or B3280</a>
B3175	Right Front Window Down Switch Circuit	PDM	<a href="#">DTC B3170, B3175, or B3280</a>
B3205	Left Front Window Motor Circuit	DDM	<a href="#">DTC B3205</a>
B3265	Trunk Release Output Circuit Short to Battery	BCM	<a href="#">DTC B3265</a>
B3280	Right Front Window Express Up or Down Circuit	PDM	<a href="#">DTC B3170, B3175, or B3280</a>
B3377	Left Front Window Up Switch Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>
B3382	Left Front Window Down Switch Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>
B3387	Right Front Window Up Switch Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>
B3392	Right Front Window Down Switch Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>
B3467	Left Front Window Express Up or Down Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>
B3472	Right Front Window Express Up or Down Circuit Low	DDSA	<a href="#">DTC B3377, B3382, B3387, B3392, B3467, or B3472</a>

B3542	Left Front Window Obstruction Sensor Control Circuit	DDM, PDM	<a href="#">DTC B3542</a>
B3602	Convertible Top Control Switch	FTC	<a href="#">DTC B3602</a>
B3618	Exterior Trunk Release Switch Circuit Low	BCM	<a href="#">DTC B3618</a>
B3619	Head-Up Display (HUD) Change Page Switch Circuit	HUD	<a href="#">DTC B3619</a>
B3620	Head Up Display (HUD) Information Up Switch Circuit	HUD	<a href="#">DTC B3620</a>
B3621	Head Up Display (HUD) Information Down Switch Circuit	HUD	<a href="#">DTC B3621</a>
B3634	Head Up Display (HUD) Dimming (Up) Switch Circuit	HUD	<a href="#">DTC B3634</a>
B3659	Head Up Display (HUD) Dimming Down Switch Circuit	HUD	<a href="#">DTC B3659</a>
B3666	Rear Tonneau Position Error	FTC	<a href="#">DTC B3666</a>
B3667	Tonneau Release Circuit	FTC	<a href="#">DTC B3667</a>
B3670	Pump Motor Temperature Sensor Circuit	FTC	<a href="#">DTC B3670</a>
B3715	Front Wiper Relay Drive Circuit	BCM	<a href="#">DTC B3715</a>
B3744	Head Up Display (HUD) Mode Switch Circuit	HUD	<a href="#">DTC B3744</a>
B3748	Air Flow Control 3 Feedback Circuit Range/Performance	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B3749	Air Flow Control 7 Feedback Circuit Range/Performance	HVAC	<a href="#">DTC B0248, B0249, B0268, B0269, B0408, B0409, B0414, B0419, B0423, B0424, B3748, or B3749</a>
B3794	Cruise Control Function Request Circuit	BCM	<a href="#">DTC B3794</a>
B3810	Headlamp Washer Relay Circuit	BCM	<a href="#">DTC B3810</a>
B3848	Interior Door Handle Switch Circuit	DDM, PDM, RCDLR	<a href="#">DTC B1474, B2966, B2981, B3848, or B3849</a>
B3849	Left Front Exterior Door Handle Switch Circuit	DDM, PDM, RCDLR	<a href="#">DTC B1474, B2966, B2981, B3848, or B3849</a>
B3948	Left Front Turn Signal Circuit	BCM	<a href="#">DTC B3948 or B3949</a>

B3949	Right Front Turn Signal Circuit	BCM	<a href="#">DTC B3948 or B3949</a>
B3950	Left Rear Turn Signal Circuit	BCM	<a href="#">DTC B3950 or B3951</a>
B3951	Right Rear Turn Signal Circuit	BCM	<a href="#">DTC B3950 or B3951</a>
B3971	Folding Top Position Sensor	FTC	<a href="#">DTC B3971</a>
C0035	Left Front Wheel Speed Sensor Circuit	EBCM	<a href="#">DTC C0035-C0050</a>
C0040	Right Front Wheel Speed Sensor Circuit	EBCM	<a href="#">DTC C0035-C0050</a>
C0045	Left Rear Wheel Speed Sensor Circuit	EBCM	<a href="#">DTC C0035-C0050</a>
C0050	Right Rear Wheel Speed Sensor Circuit	EBCM	<a href="#">DTC C0035-C0050</a>
C0110	Pump Motor Circuit	EBCM	<a href="#">DTC C0110</a>
C0131	ABS Pressure Circuit	EBCM	<a href="#">DTC C0131</a>
C0161	Antilock Brake System (ABS)/Traction Control System (TCS) Brake Switch Circuit	EBCM	<a href="#">DTC C0161</a>
C0179	System Thermal High	EBCM	<a href="#">DTC C0179</a>
C0186	Lateral Accelerometer Circuit	EBCM	<a href="#">DTC C0186 or C0196</a>
C0196	Yaw Rate Circuit	EBCM	<a href="#">DTC C0186 or C0196</a>
C0201	Antilock Brake System (ABS) Enable Relay Contact Circuit	EBCM	<a href="#">DTC C0201</a>
C0242	Powertrain Control Module (PCM) Indicated TCS Malfunction	EBCM	<a href="#">DTC C0242</a>
C0245	Wheel Speed Sensor Frequency	EBCM	<a href="#">DTC C0245</a>
C0252	Vehicle Stability Enhancement System (VSES) Sensors Uncorrelated	EBCM	<a href="#">DTC C0252</a>
C0253	Centering Error	EBCM	<a href="#">DTC C0253</a>
C0267	Low Brake Fluid Indicated	EBCM	<a href="#">DTC C0267</a>
C0277	Brake Pedal Position Sensor Circuit	BCM	<a href="#">DTC C0277</a>
C0278	Brake Pedal Position Sensor Not Calibrated	BCM	<a href="#">DTC C0278</a>
C0288	Brake Pad Wear Signal Circuit	EBCM	<a href="#">DTC C0288 or C088</a>
C0450	Steering Assist Control Solenoid/Motor/Actuator Circuit	EBCM	<a href="#">DTC C0450</a>

C0550	Electronic Control Unit (ECU) Performance	EBCM	<a href="#">DTC C0550</a>
C0558	Calibration Data Not Programmed	ESC	<a href="#">DTC C0558</a>
C0561	System Disabled Information Stored	EBCM	<a href="#">DTC C0561</a>
C0569	System Configuration Error	EBCM	<a href="#">DTC C0569</a>
		RCDLR	<a href="#">DTC C0569</a>
C0575	Left Front Actuator Circuit	ESC	<a href="#">DTC C0575, C0580, C0585, or C0590</a>
C0580	Right Front Actuator Circuit	ESC	<a href="#">DTC C0575, C0580, C0585, or C0590</a>
C0585	Left Rear Actuator Circuit	ESC	<a href="#">DTC C0575, C0580, C0585, or C0590</a>
C0590	Right Rear Actuator Circuit	ESC	<a href="#">DTC C0575, C0580, C0585, or C0590</a>
C0615	Left Front Position Sensor Circuit	ESC	<a href="#">DTC C0615, C0620, C0625, or C0630</a>
C0620	Right Front Position Sensor Circuit	ESC	<a href="#">DTC C0615, C0620, C0625, or C0630</a>
C0625	Left Rear Position Sensor Circuit	ESC	<a href="#">DTC C0615, C0620, C0625, or C0630</a>
C0630	Right Rear Position Sensor Circuit	ESC	<a href="#">DTC C0615, C0620, C0625, or C0630</a>
C0696	Position Sensor Overcurrent (5-volt supply)	ESC	<a href="#">DTC C0696</a>
C0710	Steering Position Signal	RCDLR	<a href="#">DTC C0710</a>
C0750	Left Front Low Tire Pressure Sensor	RCDLR	<a href="#">DTC C0750, C0755, C0760, or C0765</a>
C0755	Right Front Low Tire Pressure Sensor	RCDLR	<a href="#">DTC C0750, C0755, C0760, or C0765</a>
C0760	Left Rear Low Tire Pressure Sensor	RCDLR	<a href="#">DTC C0750, C0755, C0760, or C0765</a>
C0765	Right Rear Low Tire Pressure Sensor	RCDLR	<a href="#">DTC C0750, C0755, C0760, or C0765</a>
C0774	Low Tire Pressure System Performance	RCDLR	<a href="#">DTC C0774</a>
C0775	Low Tire Pressure System Sensors Not Learned	RCDLR	<a href="#">DTC C0775</a>
C0870	Device Voltage Reference Output 1 Circuit	BCM	<a href="#">DTC C0870</a>
C0895	Device Voltage	ESC	<a href="#">DTC C0895</a>
C0899	Device 1 Voltage Low	EBCM	<a href="#">DTC C0899</a>
C0900	Device 1 Voltage High	EBCM	<a href="#">DTC C0900</a>
P0016	Crankshaft Position (CKP)-Camshaft Position (CMP) Correlation	ECM	<a href="#">DTC P0016</a>

P0030	HO2S Heater Control Circuit Bank 1 Sensor 1	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0033	Supercharger Bypass Valve Solenoid Control Circuit	ECM	<a href="#">DTC P0033</a>
P0036	HO2S Heater Control Circuit Bank 1 Sensor 2	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0050	HO2S Heater Control Bank 2 Sensor 1	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0053	HO2S Heater Resistance Circuit Bank 1 Sensor 1	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0054	HO2S Heater Resistance Circuit Bank 1 Sensor 2	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0056	HO2S Heater Control Bank 2 Sensor 2	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0059	HO2S Heater Resistance Bank 2 Sensor 1	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0060	HO2S Heater Resistance Bank 2 Sensor 2	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0068	Throttle Body Airflow Performance	ECM	<a href="#">DTC P0068 or P0121</a>
P006D	Supercharger Inlet Pressure (SCIP) - Barometric Pressure (BARO) Correlation	ECM	<a href="#">DTC P006D</a>
P0096	Intake Air Temperature (IAT) Sensor 2 Performance	ECM	<a href="#">DTC P0096</a>
P0097	Intake Air Temperature (IAT) Sensor 2 Circuit Low Voltage	ECM	<a href="#">DTC P0097 or P0098</a>
P0098	Intake Air Temperature (IAT) Sensor 2 Circuit Low Voltage	ECM	<a href="#">DTC P0097 or P0098</a>
P0101	Mass Air Flow (MAF) Sensor Performance	ECM	<a href="#">DTC P0101 or P1101</a>
P0102	Mass Air Flow (MAF) Sensor Circuit Low Frequency	ECM	<a href="#">DTC P0102 or P0103</a>
P0103	Mass Air Flow (MAF) Sensor Circuit High Frequency	ECM	<a href="#">DTC P0102 or P0103</a>
P0106	Manifold Absolute Pressure (MAP) Sensor Performance	ECM	<a href="#">DTC P0106</a>

P0107	Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0107 or P0108</a>
P0108	Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0107 or P0108</a>
P0111	Intake Air Temperature (IAT) Sensor Performance	ECM	<a href="#">DTC P0111</a>
P0112	Intake Air Temperature (IAT) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0112 or P0113</a>
P0113	Intake Air Temperature (IAT) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0112 or P0113</a>
P0116	Engine Coolant Temperature (ECT) Sensor Performance	ECM	<a href="#">DTC P0116</a>
P0117	Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0117 or P0118</a>
P0118	Engine Coolant Temperature (ECT) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0117 or P0118</a>
P0120	Throttle Position (TP) Sensor 1 Circuit	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0121	Throttle Position (TP) Sensor 1 Performance	ECM	<a href="#">DTC P0068 or P0121</a>
P0122	Throttle Position (TP) Sensor 1 Circuit Low Voltage	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0123	Throttle Position (TP) Sensor 1 Circuit High Voltage	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0128	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature	ECM	<a href="#">DTC P0128</a>
P012B	Supercharger Inlet Pressure Sensor Performance	ECM	<a href="#">DTC P012B</a>
P012C	Supercharger Inlet Pressure (SCIP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P012C or P012D</a>
P012D	Supercharger Inlet Pressure (SCIP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P012C or P012D</a>
P0131	HO2S Circuit Low Voltage Bank 1 Sensor 1	ECM	<a href="#">DTC P0131, P0132, P0137, or P0138</a>
P0132	HO2S Circuit High Voltage Bank 1 Sensor 1	ECM	<a href="#">DTC P0131, P0132, P0137, or P0138</a>

P0133	HO2S Slow Response Bank 1 Sensor 1	ECM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P0134	HO2S Circuit Insufficient Activity Bank 1 Sensor 1	ECM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P0135	HO2S Heater Performance Bank 1 Sensor 1	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0137	HO2S Circuit Low Voltage Bank 1 Sensor 2	ECM	<a href="#">DTC P0131, P0132, P0137, or P0138</a>
P0138	HO2S Circuit High Voltage Bank 1 Sensor 2	ECM	<a href="#">DTC P0131, P0132, P0137, or P0138</a>
P0140	HO2S Circuit Insufficient Activity Bank 1 Sensor 2	ECM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P0141	HO2S Heater Performance Bank 1 Sensor 2	ECM	<a href="#">DTC P0030, P0036, P0053, P0054, P0135, or P0141</a>
P0151	HO2S Circuit Low Voltage Bank 2 Sensor 1	ECM	<a href="#">DTC P0151, P0152, P0157, or P0158</a>
P0152	HO2S Circuit High Voltage Bank 2 Sensor 1	ECM	<a href="#">DTC P0151, P0152, P0157, or P0158</a>
P0153	HO2S Slow Response Bank 2 Sensor 1	ECM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P0154	HO2S Circuit Insufficient Activity Bank 2 Sensor 1	ECM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P0155	HO2S Heater Performance Bank 2 Sensor 1	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0157	HO2S Circuit Low Voltage Bank 2 Sensor 2	ECM	<a href="#">DTC P0151, P0152, P0157, or P0158</a>
P0158	HO2S Circuit High Voltage Bank 2 Sensor 2	ECM	<a href="#">DTC P0151, P0152, P0157, or P0158</a>
P0160	HO2S Circuit Insufficient Activity Bank 2 Sensor 2	ECM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P0161	HO2S Heater Performance Bank 2 Sensor 2	ECM	<a href="#">DTC P0050, P0056, P0059, P0060, P0155, or P0161</a>
P0171	Fuel Trim System Lean Bank 1	ECM	<a href="#">DTC P0171, P0172, P0174, or P0175</a>
P0172	Fuel Trim System Rich Bank 1	ECM	<a href="#">DTC P0171, P0172, P0174, or P0175</a>
P0174	Fuel Trim System Lean Bank 2	ECM	<a href="#">DTC P0171, P0172, P0174, or P0175</a>



P0175	Fuel Trim System Rich Bank 2	ECM	<a href="#">DTC P0171, P0172, P0174, or P0175</a>
P0191	Fuel Rail Pressure (FRP) Sensor Performance	ECM	<a href="#">DTC P0191</a>
P0192	Fuel Rail Pressure (FRP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0192 or P0193</a>
P0193	Fuel Rail Pressure (FRP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0192 or P0193</a>
P0201	Injector 1 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0202	Injector 2 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0203	Injector 3 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0204	Injector 4 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0205	Injector 5 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0206	Injector 6 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0207	Injector 7 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0208	Injector 8 Control Circuit	ECM	<a href="#">DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</a>
P0218	Transmission Fluid Overtemperature	TCM	<a href="#">DTC P0218</a>
P0220	Throttle Position (TP) Sensor 2 Circuit	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0222	Throttle Position (TP) Sensor 2 Circuit Low Voltage	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0223	Throttle Position (TP) Sensor 2 Circuit High Voltage	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P0230	Fuel Pump Relay Control Circuit	ECM	<a href="#">DTC P0230</a>
P023A	Charge Air Cooler (CAC) Coolant Pump Relay Control Circuit	ECM	<a href="#">DTC P023A</a>
P025A	Fuel Pump Flow Control Module Enable Circuit	FPCM	<a href="#">DTC P025A</a>

P0300	Engine Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0301	Cylinder 1 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0302	Cylinder 2 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0303	Cylinder 3 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0304	Cylinder 4 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0305	Cylinder 5 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0306	Cylinder 6 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0307	Cylinder 7 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0308	Cylinder 8 Misfire Detected	ECM	<a href="#">DTC P0300-P0308</a>
P0315	Crankshaft Position (CKP) System Variation Not Learned	ECM	<a href="#">DTC P0315</a>
P0324	Knock Sensor (KS) Module Performance	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0325	Knock Sensor (KS) Circuit Bank 1	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0326	Knock Sensor (KS) Performance	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0327	Knock Sensor (KS) Circuit Low Voltage Bank 1	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0328	Knock Sensor (KS) Circuit High Voltage Bank 1	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0330	Knock Sensor (KS) Circuit Bank 2	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0332	Knock Sensor (KS) Circuit Low Voltage Bank 2	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0333	Knock Sensor (KS) Circuit High Voltage Bank 2	ECM	<a href="#">DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</a>
P0335	Crankshaft Position (CKP) Sensor Circuit	ECM	<a href="#">DTC P0335</a>
P0336	Crankshaft Position (CKP) Sensor Performance	ECM	<a href="#">DTC P0336</a>
P0340	Camshaft Position (CMP) Sensor Circuit	ECM	<a href="#">DTC P0340</a>

P0341	Camshaft Position (CMP) Sensor Performance	ECM	<a href="#">DTC P0341</a>
P0351	Ignition Coil 1 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0352	Ignition Coil 3 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0353	Ignition Coil 3 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0354	Ignition Coil 4 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0355	Ignition Coil 5 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0356	Ignition Coil 6 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0357	Ignition Coil 7 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0358	Ignition Coil 8 Control Circuit	ECM	<a href="#">DTC P0351-P0358</a>
P0420	Catalyst System Low Efficiency Bank 1	ECM	<a href="#">DTC P0420 or P0430</a>
P0430	Catalyst System Low Efficiency Bank 2	ECM	<a href="#">DTC P0420 or P0430</a>
P0442	Evaporative Emission (EVAP) System Small Leak Detected	ECM	<a href="#">DTC P0442</a>
P0443	Evaporative Emission (EVAP) Purge Solenoid Control Circuit	ECM	<a href="#">DTC P0443 or P0449</a>
P0446	Evaporative Emission (EVAP) Vent System Performance	ECM	<a href="#">DTC P0446</a>
P0449	Evaporative Emission (EVAP) Vent Solenoid Control Circuit	ECM	<a href="#">DTC P0443 or P0449</a>
P0451	Fuel Tank Pressure (FTP) Sensor Performance	ECM	<a href="#">DTC P0451, P0452, P0453, or P0454</a>
P0452	Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0451, P0452, P0453, or P0454</a>
P0453	Fuel Tank Pressure (FTP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0451, P0452, P0453, or P0454</a>
P0454	Fuel Tank Pressure (FTP) Sensor Circuit Intermittent	ECM	<a href="#">DTC P0451, P0452, P0453, or P0454</a>
P0455	Evaporative Emission (EVAP) System Large Leak Detected	ECM	<a href="#">DTC P0455</a>
P0461	Fuel Level Sensor 1 Performance	ECM	<a href="#">DTC P0461</a>
P0462	Fuel Level Sensor 1 Circuit Low Voltage	ECM	<a href="#">DTC P0462</a>

P0463	Fuel Level Sensor 1 Circuit High Voltage	ECM	<a href="#">DTC P0463</a>
P0464	Fuel Level Sensor Circuit Intermittent	ECM	<a href="#">DTC P0464</a>
P0480	Cooling Fan Speed Output Circuit	ECM	<a href="#">DTC P0480</a>
P0496	Evaporative Emission (EVAP) System Flow During Non-Purge	ECM	<a href="#">DTC P0496</a>
P0502	Vehicle Speed Sensor (VSS) Circuit Low Voltage	ECM	<a href="#">DTC P0502 or P0503</a>
P0503	Vehicle Speed Sensor (VSS) Circuit Intermittent	ECM	<a href="#">DTC P0502 or P0503</a>
P0506	Idle Speed Low	ECM	<a href="#">DTC P0506 or P0507</a>
P0507	Idle Speed High	ECM	<a href="#">DTC P0506 or P0507</a>
P0521	Engine Oil Pressure (EOP) Sensor Performance	ECM	<a href="#">DTC P0521, P0522, or P0523</a>
P0522	Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0521, P0522, or P0523</a>
P0523	Engine Oil Pressure (EOP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0521, P0522, or P0523</a>
P0532	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0532 or P0533</a>
P0533	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit High Voltage	ECM	<a href="#">DTC P0532 or P0533</a>
P0562	System Voltage Low	ECM	<a href="#">DTC P0562</a>
		TCM	<a href="#">DTC P0562 or P0563</a>
P0563	System Voltage High	ECM	<a href="#">DTC P0563</a>
		TCM	<a href="#">DTC P0562 or P0563</a>
P0572	Brake Switch Circuit 1 Low Voltage	ECM	<a href="#">DTC P0572 or P0573</a>
P0573	Brake Switch Circuit 1 High Voltage	ECM	<a href="#">DTC P0572 or P0573</a>
P0575	Cruise Control Switch Signal Circuit	ECM	<a href="#">DTC P0575</a>
P0601	Control Module Read Only Memory (ROM)	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>

	Transmission Control Module (TCM) Read Only Memory (ROM)	TCM	<a href="#">DTC P0601-P0604 or P062F</a>
P0602	Control Module Not Programmed	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>
	Transmission Control Module (TCM) Not Programmed	TCM	<a href="#">DTC P0601-P0604 or P062F</a>
P0603	Control Module Long Term Memory Reset	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>
	Transmission Control Module (TCM) Long Term Memory Reset	TCM	<a href="#">DTC P0601-P0604 or P062F</a>
P0604	Control Module Random Access Memory (RAM)	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>
	Transmission Control Module (TCM) Random Access Memory (RAM)	TCM	<a href="#">DTC P0601-P0604 or P062F</a>
P0606	Control Module Internal Performance	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>
P0607	Control Module Performance	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
P0608	Vehicle Speed Output Circuit	ECM	<a href="#">DTC P0608</a>
P060D	Control Module Accelerator Pedal Position (APP) System Performance	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
P0615	Starter Relay Control Circuit	ECM	<a href="#">DTC P0615</a>
P0621	Generator L-Terminal Circuit	ECM	<a href="#">DTC P0621</a>
P0622	Generator F-Terminal Circuit	ECM	<a href="#">DTC P0622</a>

P062F	Control Module Long Term Memory Performance	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
		FPCM	<a href="#">DTC P0601-P0604, P0606, or P062F</a>
	Transmission Control Module (TCM) Long Term Memory Performance	TCM	<a href="#">DTC P0601-P0604 or P062F</a>
P0634	Transmission Control Module (TCM) Overtemperature	TCM	<a href="#">DTC P0634</a>
P0641	5-Volt Reference 1 Circuit	ECM	<a href="#">DTC P0641 or P0651</a>
	5-Volt Reference Circuit	FPCM	<a href="#">DTC P0641 or P06A6</a>
P0645	Air Conditioning (A/C) Clutch Relay Control Circuit	ECM	<a href="#">DTC P0645</a>
P0650	Malfunction Indicator Lamp (MIL) Control Circuit	ECM	<a href="#">DTC P0650</a>
P0651	5-Volt Reference 2 Circuit	ECM	<a href="#">DTC P0641 or P0651</a>
P0654	Engine Speed Output Circuit	ECM	<a href="#">DTC P0654</a>
P0658	Solenoid High Control Circuit Group 1 Low Voltage	TCM	<a href="#">DTC P0658 or P0659</a>
P0659	Solenoid High Control Circuit Group 1 High Voltage	TCM	<a href="#">DTC P0658 or P0659</a>
P0667	Transmission Control Module (TCM) Temperature Sensor Performance	TCM	<a href="#">DTC P0667, P0668, or P0669</a>
P0668	Transmission Control Module (TCM) Temperature Sensor Circuit Low Voltage	TCM	<a href="#">DTC P0667, P0668, or P0669</a>
P0669	Transmission Control Module (TCM) Temperature Sensor Circuit High Voltage	TCM	<a href="#">DTC P0667, P0668, or P0669</a>
P0685	Engine Controls Ignition Relay Control Circuit	ECM	<a href="#">DTC P0685, P0689, or P0690</a>
P0689	Engine Controls Ignition Relay Feedback Circuit Low Voltage	ECM	<a href="#">DTC P0685, P0689, or P0690</a>
P0690	Engine Controls Ignition Relay Feedback Circuit High Voltage	ECM	<a href="#">DTC P0685, P0689, or P0690</a>
P069E	Fuel Pump Flow Control Module (FPCM) Requested MIL Illumination	ECM	<a href="#">DTC P069E</a>

P06A6	5-Volt Reference Circuit Performance	FPCM	<a href="#">DTC P0641 or P06A6</a>
P06AC	Transmission Control Module (TCM) Power Up Temperature Sensor Performance	TCM	<a href="#">DTC P06AC, P06AD, or P06AE</a>
P06AD	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit Low Voltage	TCM	<a href="#">DTC P06AC, P06AD, or P06AE</a>
P06AE	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit High Voltage	TCM	<a href="#">DTC P06AC, P06AD, or P06AE</a>
P0700	Transmission Control Module (TCM) Requested MIL Illumination	ECM	<a href="#">DTC P0700</a>
P0703	Brake Switch 2 Circuit	TCM	<a href="#">DTC P0703</a>
P0711	Transmission Fluid Temperature (TFT) Sensor Performance	TCM	<a href="#">DTC P0711</a>
P0712	Transmission Fluid Temperature (TFT) Sensor Circuit Low Voltage	ECM, TCM	<a href="#">DTC P0712 or P0713</a> for the Tremec 6-Speed transmission or <a href="#">DTC P0712 or P0713</a> for the 6L50/6L80/6L90 transmission
P0713	Transmission Fluid Temperature (TFT) Sensor Circuit High Voltage	ECM, TCM	<a href="#">DTC P0712 or P0713</a> for the Tremec 6-Speed transmission or <a href="#">DTC P0712 or P0713</a> for the 6L50/6L80/6L90 transmission
P0716	Speed Sensor Performance	TCM	<a href="#">DTC P0716 or P0717</a>
P0717	Input Speed Sensor Circuit Low Voltage	TCM	<a href="#">DTC P0716 or P0717</a>
P0719	Brake Switch Circuit Low Voltage	TCM	<a href="#">DTC P0719</a>
P0722	Output Speed Sensor Circuit Low Voltage	TCM	<a href="#">DTC P0722 or P0723</a>
P0723	Output Speed Sensor Circuit Intermittent	TCM	<a href="#">DTC P0722 or P0723</a>
P0724	Brake Switch Circuit High Voltage	TCM	<a href="#">DTC P0724</a>
P0741	Torque Converter Clutch (TCC) System - Stuck Off	TCM	<a href="#">DTC P0741 or P0742</a>

P0742	Torque Converter Clutch (TCC) System - Stuck On	TCM	<a href="#">DTC P0741 or P0742</a>
P0751	1-2 Shift Solenoid (SS) Valve Performance - No First or Fourth Gear	TCM	<a href="#">DTC P0751</a>
P0752	1-2 Shift Solenoid (SS) Valve Performance - No Second or Third Gear	TCM	<a href="#">DTC P0752</a>
P0756	2-3 Shift Solenoid (SS) Valve Performance - No First or Second Gear	TCM	<a href="#">DTC P0756</a>
P0776	Clutch Pressure Control (PC) Solenoid 2- Stuck Off	TCM	<a href="#">DTC P0776 or P0777</a>
P0777	Clutch Pressure Control (PC) Solenoid 2- Stuck On	TCM	<a href="#">DTC P0776 or P0777</a>
P0796	Clutch Pressure Control (PC) Solenoid 3- Stuck Off	TCM	<a href="#">DTC P0796 or P0797</a>
P0797	Clutch Pressure Control (PC) Solenoid 3- Stuck On	TCM	<a href="#">DTC P0796 or P0797</a>
P0801	Reverse Lockout Solenoid Control Circuit	ECM	<a href="#">DTC P0801</a>
P0803	Skip Shift Solenoid Control Circuit	ECM	<a href="#">DTC P0803</a>
P0806	Clutch Pedal Position (CPP) Sensor Circuit Performance	ECM	<a href="#">DTC P0806</a>
P0807	Clutch Pedal Position (CPP) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P0807 or P0808</a>
P0808	Clutch Pedal Position (CPP) Sensor Circuit High Voltage	ECM	<a href="#">DTC P0807 or P0808</a>
P080A	Clutch Pedal Position (CPP) Not Learned	ECM	<a href="#">DTC P080A</a>
P0815	Upshift Switch Circuit	TCM	<a href="#">DTC P0815, P0816, P0826, or P1876</a>
P0816	Downshift Switch Circuit	TCM	<a href="#">DTC P0815, P0816, P0826, or P1876</a>
P0826	Up and Down Shift Switch Circuit	TCM	<a href="#">DTC P0815, P0816, P0826, or P1876</a>
P0842	Transmission Fluid Pressure (TFP) Switch 1 Circuit Low Voltage	TCM	<a href="#">DTC P0842 or P0843</a>
P0843	Transmission Fluid Pressure (TFP) Switch 1 Circuit High Voltage	TCM	<a href="#">DTC P0842 or P0843</a>
P0850	Park/Neutral Position (PNP) Switch Circuit	TCM	<a href="#">DTC P0850-P0852</a>



P0851	Park/Neutral Position (PNP) Switch Circuit Low Voltage	TCM	<a href="#">DTC P0850-P0852</a>
P0852	Park/Neutral Position (PNP) Switch Circuit High Voltage	TCM	<a href="#">DTC P0850-P0852</a>
P0872	Transmission Fluid Pressure (TFP) Switch 3 Circuit Low Voltage	TCM	<a href="#">DTC P0872 or P0873</a>
P0873	Transmission Fluid Pressure (TFP) Switch 3 Circuit High Voltage	TCM	<a href="#">DTC P0872 or P0873</a>
P0877	Transmission Fluid Pressure (TFP) Switch 4 Circuit Low Voltage	TCM	<a href="#">DTC P0877 or P0878</a>
P0878	Transmission Fluid Pressure (TFP) Switch 4 Circuit High Voltage	TCM	<a href="#">DTC P0877 or P0878</a>
P0961	Line Pressure Control (PC) Solenoid System Performance	TCM	<a href="#">DTC P0961-P0963</a>
P0962	Line Pressure Control (PC) Solenoid Control Circuit Low Voltage	TCM	<a href="#">DTC P0961-P0963</a>
P0963	Line Pressure Control (PC) Solenoid Control Circuit High Voltage	TCM	<a href="#">DTC P0961-P0963</a>
P0965	Clutch Pressure Control (PC) Solenoid 2 System Performance	TCM	<a href="#">DTC P0965-P0967</a>
P0966	Clutch Pressure Control (PC) Solenoid 2 Control Circuit Low Voltage	TCM	<a href="#">DTC P0965-P0967</a>
P0967	Clutch Pressure Control (PC) Solenoid 2 Control Circuit High Voltage	TCM	<a href="#">DTC P0965-P0967</a>
P0969	Clutch Pressure Control (PC) Solenoid 3 System Performance	TCM	<a href="#">DTC P0969-P0971</a>
P0970	Clutch Pressure Control (PC) Solenoid 3 Control Circuit Low Voltage	TCM	<a href="#">DTC P0969-P0971</a>
P0971	Clutch Pressure Control (PC) Solenoid 3 Control Circuit High Voltage	TCM	<a href="#">DTC P0969-P0971</a>
P0973	1-2 Shift Solenoid (SS) Control Circuit Low Voltage	TCM	<a href="#">DTC P0973 or P0974</a>
P0974	1-2 Shift Solenoid (SS) Control Circuit High Voltage	TCM	<a href="#">DTC P0973 or P0974</a>
P0976	2-3 Shift Solenoid (SS) Control Circuit Low Voltage	TCM	<a href="#">DTC P0976 or P0977</a>

P0977	2-3 Shift Solenoid (SS) Control Circuit High Voltage	TCM	<a href="#">DTC P0976 or P0977</a>
P0989	Transmission Fluid Pressure (TFP) Switch 5 Circuit Low Voltage	TCM	<a href="#">DTC P0989 or P0990</a>
P0990	Transmission Fluid Pressure (TFP) Switch 5 Circuit High Voltage	TCM	<a href="#">DTC P0989 or P0990</a>
P1101	Intake Air Flow System Performance	ECM	<a href="#">DTC P0101 or P1101</a>
P1133	HO2S Insufficient Switching Bank 1 Sensor 1	ECM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P1153	HO2S Insufficient Switching Bank 2 Sensor 1	ECM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P1174	Fuel Trim Cylinder Balance Bank 1	ECM	<a href="#">DTC P1174 or P1175</a>
P1175	Fuel Trim Cylinder Balance Bank 2	ECM	<a href="#">DTC P1174 or P1175</a>
P1255	Fuel Pump Control Module Driver Over-temperature	FPCM	<a href="#">DTC P1255</a>
P1258	Engine Coolant Overtemperature - Protection Mode Active	ECM	<a href="#">DTC P1258</a>
P129B	System Voltage Low	FPCM	<a href="#">DTC P129B</a>
P129C	System Voltage High	FPCM	<a href="#">DTC P129C</a>
P129D	Ignition 1 Switch Circuit Low Voltage	FPCM	<a href="#">DTC P129D</a>
P129F	Fuel Pump Speed Signal Incorrect	FPCM	<a href="#">DTC P129F</a>
P12A0	Fuel Pump Speed Circuit Low Duty Cycle	FPCM	<a href="#">DTC P12A0-P12A2</a>
P12A1	Fuel Pump Speed Circuit High Duty Cycle	FPCM	<a href="#">DTC P12A0-P12A2</a>
P12A2	Fuel Pump Speed Circuit Performance	FPCM	<a href="#">DTC P12A0-P12A2</a>
P12A4	Fuel Pump Enable Circuit Low Voltage	FPCM	<a href="#">DTC P12A4-P12A6</a>
P12A5	Fuel Pump Enable Circuit High Voltage	FPCM	<a href="#">DTC P12A4-P12A6</a>
P12A6	Fuel Pump Enable Circuit Performance	FPCM	<a href="#">DTC P12A4-P12A6</a>
P12A7	Fuel Pump Phase U-V-W Circuit	FPCM	<a href="#">DTC P12A7</a>
P1380	Misfire Detected - Rough Road Data Not Available	ECM	<a href="#">DTC P1380 or P1381</a>

P1381	Misfire Detected - No Communication With Brake Control Module	ECM	<a href="#">DTC P1380 or P1381</a>
P1400	Cold Start Emission Reduction Control System	ECM	<a href="#">DTC P1400</a>
P1482	Cooling Fan Speed Output Circuit	ECM	<a href="#">DTC P1482</a>
P1516	Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance	ECM	<a href="#">DTC P1516, P2101, P2119, or P2176</a>
P1630	Theft Deterrent Learn Mode Active	ECM	<a href="#">DTC P1630</a>
P1631	Theft Deterrent Fuel Enable Signal Not Correct	ECM	<a href="#">DTC P1631</a>
P164B	Fuel Pump Driver Control Module Read Only Memory (ROM)	FPCM	<a href="#">DTC P164B or P164C</a>
P164C	Fuel Pump Driver Control Module Read Only Memory (ROM)	FPCM	<a href="#">DTC P164B or P164C</a>
P166A	Exhaust Control Valve Control Circuit	EFCM	<a href="#">DTC P166A</a>
P1682	Ignition 1 Switch Circuit 2	ECM	<a href="#">DTC P1682</a>
P1684	Transmission Control Module (TCM) Power Up Temperature Sensor Performance	TCM	<a href="#">DTC P1684-P1686</a>
P1685	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit Low Voltage	TCM	<a href="#">DTC P1684-P1686</a>
P1686	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit High Voltage	TCM	<a href="#">DTC P1684-P1686</a>
P1751	Shift Valve 1 Performance	TCM	<a href="#">DTC P1751</a>
P1761	Up and Down Shift Switch Signal Circuit	TCM	<a href="#">DTC P1761</a>
P1825	Internal Mode Switch-Invalid Range	TCM	<a href="#">DTC P1825 or P1915</a>
P182A	Internal Mode Switch - Invalid Range	TCM	<a href="#">DTC P182A</a>
P1831	Pressure Control (PC)/Shift Lock Solenoid Control Circuit Low Voltage	TCM	<a href="#">DTC P1831 or P1832</a>
P1832	Pressure Control (PC)/Shift Lock Solenoid Control Circuit High Voltage	TCM	<a href="#">DTC P1831 or P1832</a>
P1876	Up and Down Shift Enable Switch Circuit Low Voltage	TCM	<a href="#">DTC P0815, P0816, P0826, or P1876</a>

P1915	Internal Mode Switch Start/Wrong Range	TCM	<a href="#">DTC P1825 or P1915</a>
P2066	Fuel Level Sensor 2 Performance	ECM	<a href="#">DTC P2066 or P2636</a>
P2067	Fuel Level Sensor 2 Circuit Low Voltage	ECM	<a href="#">DTC P2067</a>
P2068	Fuel Level Sensor 2 Circuit High Voltage	ECM	<a href="#">DTC P2068</a>
P2101	Control Module Throttle Actuator Position Performance	ECM	<a href="#">DTC P1516, P2101, P2119, or P2176</a>
P2119	Throttle Closed Position Performance	ECM	<a href="#">DTC P1516, P2101, P2119, or P2176</a>
P2120	Accelerator Pedal Position (APP) Sensor 1 Circuit	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2122	Accelerator Pedal Position (APP) Sensor 1 Circuit Low Voltage	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2123	Accelerator Pedal Position (APP) Sensor 1 Circuit High Voltage	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2125	Accelerator Pedal Position (APP) Sensor 2 Circuit	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2127	Accelerator Pedal Position (APP) Sensor 2 Circuit Low Voltage	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2128	Accelerator Pedal Position (APP) Sensor 2 Circuit High Voltage	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2135	Throttle Position (TP) Sensor 1-2 Correlation	ECM	<a href="#">DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</a>
P2138	Accelerator Pedal Position (APP) Sensor 1-2 Correlation	ECM	<a href="#">DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</a>
P2176	Minimum Throttle Position Not Learned	ECM	<a href="#">DTC P1516, P2101, P2119, or P2176</a>
P2227	Barometric Pressure (BARO) Sensor Performance	ECM	<a href="#">DTC P2227</a>
P2228	Barometric Pressure (BARO) Sensor Circuit Low Voltage	ECM	<a href="#">DTC P2228 or P2229</a>
P2229	Barometric Pressure (BARO) Sensor Circuit High Voltage	ECM	<a href="#">DTC P2228 or P2229</a>
P2270	HO2S Signal Stuck Lean Bank 1 Sensor 2	TCM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P2271	HO2S Signal Stuck Rich Bank 1 Sensor 2	TCM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>

P2272	HO2S Signal Stuck Lean Bank 2 Sensor 2	TCM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P2273	HO2S Signal Stuck Rich Bank 2 Sensor 2	TCM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
P2534	Ignition 1 Switch Circuit Low Voltage	ECM	<a href="#">DTC P2534</a>
		TCM	<a href="#">DTC P2534</a>
P2544	Transmission Torque Request Circuit	TCM	<a href="#">DTC P2544</a>
P2610	Control Module Ignition Off Timer Performance	ECM	<a href="#">DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</a>
P2635	Fuel Pump Flow Performance	FPCM	<a href="#">DTC P2635</a>
P2636	Fuel Transfer Pump Flow Insufficient	ECM	<a href="#">DTC P2066 or P2636</a>
P2714	Clutch Pressure Control (PC) Solenoid 4- Stuck Off	TCM	<a href="#">DTC P2714 or P2715</a>
P2715	Clutch Pressure Control (PC) Solenoid 4- Stuck On	TCM	<a href="#">DTC P2714 or P2715</a>
P2719	Clutch Pressure Control (PC) Solenoid 4 System Performance	TCM	<a href="#">DTC P2719-P2721</a>
P2720	Clutch Pressure Control (PC) Solenoid 4 Control Circuit Low Voltage	TCM	<a href="#">DTC P2719-P2721</a>
P2721	Clutch Pressure Control (PC) Solenoid 4 Control Circuit High Voltage	TCM	<a href="#">DTC P2719-P2721</a>
P2723	Clutch Pressure Control (PC) Solenoid 5- Stuck Off	TCM	<a href="#">DTC P2723 or P2724</a>
P2724	Clutch Pressure Control (PC) Solenoid 5- Stuck On	TCM	<a href="#">DTC P2723 or P2724</a>
P2728	Clutch Pressure Control (PC) Solenoid 5 System Performance	TCM	<a href="#">DTC P2728-P2730</a>
P2729	Clutch Pressure Control (PC) Solenoid 5 Control Circuit Low Voltage	TCM	<a href="#">DTC P2728-P2730</a>
P2730	Clutch Pressure Control (PC) Solenoid 5 Control Circuit High Voltage	TCM	<a href="#">DTC P2728-P2730</a>
P2762	Torque Converter Clutch (TCC) Pressure Control Solenoid System Performance	TCM	<a href="#">DTC P2762, P2763, or P2764</a>

P2763	Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit High Voltage	TCM	<a href="#">DTC P2762, P2763, or P2764</a>
P2764	Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit Low Voltage	TCM	<a href="#">DTC P2762, P2763, or P2764</a>
P2A01	HO2S Performance Bank 1 Sensor 2	ECM	<a href="#">DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01</a>
P2A04	HO2S Performance Bank 2 Sensor 2	ECM	<a href="#">DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04</a>
U0001	High Speed CAN Communication Bus	ECM	<a href="#">DTC U0001</a>
U0073	Controller Area Network (CAN) Bus Communication	BCM, EBCM, ECM, ESC, TCM, VCIM	<a href="#">DTC U0073 or U2100</a>
U0100 - U0299	Lost Communications with XXX Control Module	--	<a href="#">DTC U0100-U0299</a>
U1000	Class 2 Data Link	BCM, DDM, DDS, DPM, DRR, FTC, HUD, IPC, PDM, Radio, RCDLR, SCLCM, SDM, VCIM	<a href="#">DTC U1000 and U1255</a>
U1001 - U1254	Lost Communications with XXX Control Module	--	<a href="#">DTC U1001-U1254</a>
U1255	Class 2 Data Link	HVAC	<a href="#">DTC U1000 and U1255</a>
U1300	Class 2 Data Link Low	DDM, DDS, DRR, HVAC, IPC, PDM, Radio, SDM, VCIM	<a href="#">DTC U1300, U1301, or U1305</a>
U1301	Class 2 Data Link High	DDM, DDS, DRR, HVAC, IPC, PDM, Radio, SDM, VCIM	<a href="#">DTC U1300, U1301, or U1305</a>

U1305	Class 2 Data Link Low or High	BCM, DPM, FTC, HUD, SCLCM	<a href="#">DTC U1300, U1301, or U1305</a>
U2100	Controller Area Network (CAN) Bus Communication	ESC, BCM, EBCM, TCM	<a href="#">DTC U0073 or U2100</a>
U2105 - U2199	Lost Communication with XXX Control Module	--	<a href="#">DTC U2105-U2199</a>
023	Seat Belt Tension Sensor Circuit Out of Range	PPS	<a href="#">DTC 023</a>
024	PPS Ignition 1 Voltage Performance	PPS	<a href="#">DTC 024</a>
063	PPS Out of Calibration	PPS	<a href="#">DTC 063</a>
064	PPS Communication/ID Performance	PPS	<a href="#">DTC 064</a>
065	PPS Sensor Circuit Out of Range	PPS	<a href="#">DTC 065</a>