Remaining in Vehicle	Exiting Vehicle
1. Ensure the vehicle is on level	1. Ensure the vehicle is on level
ground, the engine is running	ground, the engine is running
and the vehicle is in P (Park).	and the vehicle is in P (Park).
2. Apply the brake pedal.	2. Apply the brake pedal.
3. Shift to N (Neutral).	3. Open the door.
Turn off the engine and release	4. Shift to N (Neutral).
the brake pedal.	Turn off the engine and release
5. The indicator should continue	the brake pedal.
to show N. If it does not, start	6. The indicator should continue
the engine and repeat	to show N. If it does not, start
Steps 2–4.	the engine and repeat
6. The vehicle will now remain in	Steps 2–5.
N (Neutral).	Exit the vehicle and close
	the door.
	8. The vehicle may automatically
	shift to P (Park) upon re-entry.