


# EZ C6 Front Tow Hook

## Installation Guide

**Caution:** Disconnect the negative side of the battery. You will be working near the air bag sensor and although it is unlikely you would hit the sensor with a tool, it is better to be on the safe side.

**Tools Required:** Custom Drill Bit Kit, 3/8" right angle air wrench, 9/16" wrench, 9/16 socket with ratchet wrench, 1" spade drill

1. Locate the rear of impact bar on the driver's side and clean an area (about 3" x 3") where the tow hook bracket will be temporarily installed using double stick tape.

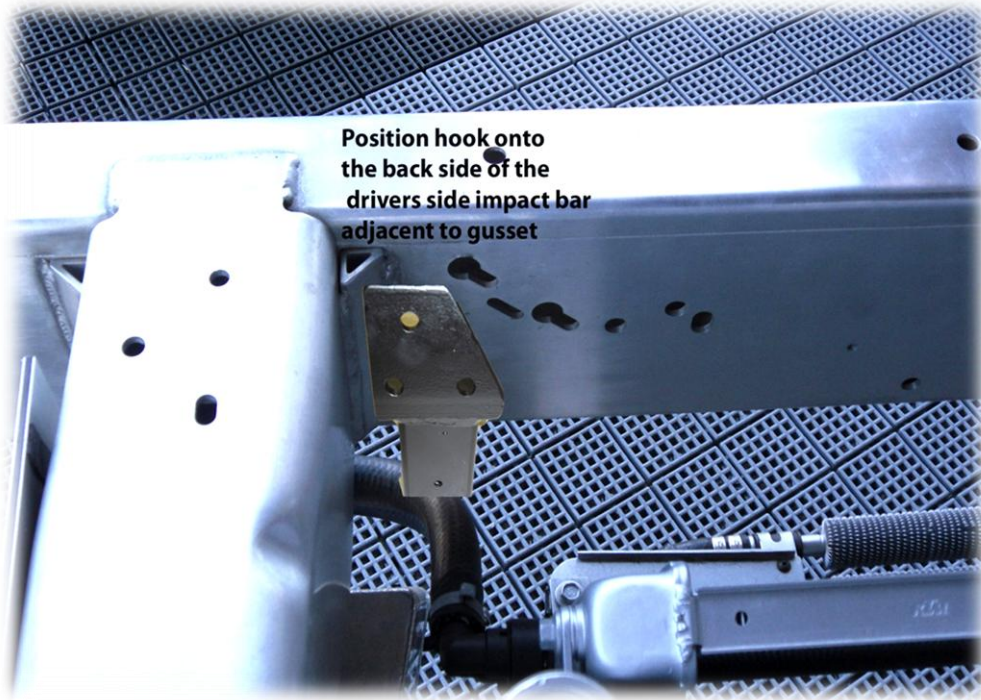

2. Remove the paper on the side of the double stick tape (*tape provided*) and press bracket into position to drill the 3/8" pilot holes. Using the air wrench with the 3/8" bit, drill the top pilot hole first and then place a 3/8" bolt in the hole to ensure that the bracket stays properly positioned for drilling the other holes. Drill the other 3/8" pilot holes. *The speed of the air wrench is slow which helps control the drilling process. **Frequently oil the bit to keep it sharp.***



3. Remove the bracket and clean the tape residue from the bracket and impact bar.
4. Using the 17/32" bit, drill the pilot holes to the proper size for the bolt inserts.

5. Remove 1 1/2" bolt, place 9/16 box end wrench on lock nut and reassemble.



6. Insert rivet into the 17/32" hole using a 9/16" box wrench to securely hold the rivet in the hole. Using a 9/16 socket begin to tighten the bolt. You will feel the rivet collapsing. Stop when tight. See process on below:



7. Install the bracket using the 3/8" x 1" bolts.
8. Insert the 3/16" bit into the back of the bracket where the 1/4" pilot hole is located. Drill a locating hole for the eye bolt into the plastic divider between the bracket and the grill. You can either use a 3/8" to 1/4" adapter with the air wrench or use a 1/4" drive hand ratchet. You are only drilling through 1/8" plastic. It may help to have someone hold the eye hook against the plastic from the grill side.
9. From the front of the car insert the 1" spade drill through the grill and drill a hole into plastic so that the eye hook can be inserted.



- 10.
11. Insert the eye hook through the grill and screw it into place. Use a drop of lock tight if you plan to leave the hook in place for extended periods.

You're Done!