


EZ C6 Front Tow Hook

Installation Guide

Caution: Disconnect the negative side of the battery. You will be working near the air bag sensor and although it is unlikely you would hit the sensor with a tool, it is better to be on the safe side.

Tools Required: Custom Drill Bit Kit, 3/8" right angle air wrench, 9/16" wrench, 9/16 socket with ratchet wrench, 1" spade drill.

1. Locate the rear of impact bar on the driver's side and clean an area (about 3" x 3") where the tow hook bracket will be temporarily installed using double stick tape. **Be sure the bracket is tight to the bottom of the impact bar.**

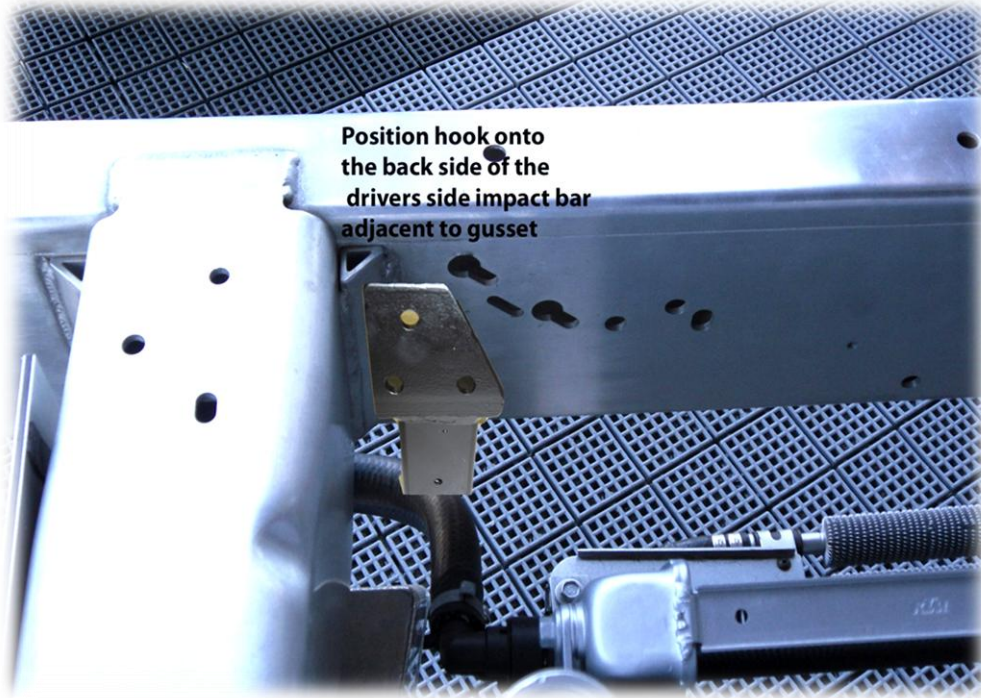

2. Remove the paper on the side of the double stick tape (*tape provided*) and press bracket into position to drill the 3/8" pilot holes. Using the air wrench with the 3/8" bit, drill the top pilot hole first and then place a 3/8" bolt in the hole to ensure that the bracket stays properly positioned for drilling the other holes. Drill the other 3/8" pilot holes. *The speed of the air wrench is slow which helps control the drilling process. Frequently oil the bit to keep it sharp.*



3. Remove the bracket and clean the tape residue from the bracket and impact bar.
4. Using the 17/32" bit, drill the pilot holes to the proper size for the bolt inserts.

5. Remove 1 1/2" bolt, place 9/16 box end wrench on lock nut and reassemble.



6. Insert rivet into the 17/32" hole using a 9/16" box wrench to securely hold the rivet in the hole. Using a 9/16 socket begin to tighten the bolt. You will feel the rivet collapsing. Stop when tight. See process on below:



7. Install the bracket using the 3/8" x 1" bolts.
8. From the front of the car insert the 1" spade drill through the grill and drill a hole into plastic so that the eye hook can be inserted. You may want to heat an ice pick to insert into the 1/4" hole to mark the spot in the plastic barrier prior to drilling from the front.



9. Insert the eye hook through the grill and screw it into place. Use a drop of lock tight if you plan to leave the hook in place for extended periods.

You're Done!