



CHEVROLET

E 210


ASSEMBLY INSTRUCTIONS

3865300

CORVETTE 19000 SERIES

- 1 3866126 SHAFT ASM-TACH
- 2 3839895 SHAFT ASM-SPEEDO
6409685 OPT. NPC 66-9
- 3 455622 RIVET
- 4 3788712 CLIP
- 5 3824713 GROMMET
- 6 ROUTE SHAFT UNDER W/S WIPER RODS

- 7 3775589 FITTING
- 8 370846 SEAL
- 9 SPEEDO DRIVEN GEAR - REFER TO
3813578 CHART
- 10 3708148 RETAINER
- 11 9408107 SCREW ASM.
- 12 3862811 GROMMET

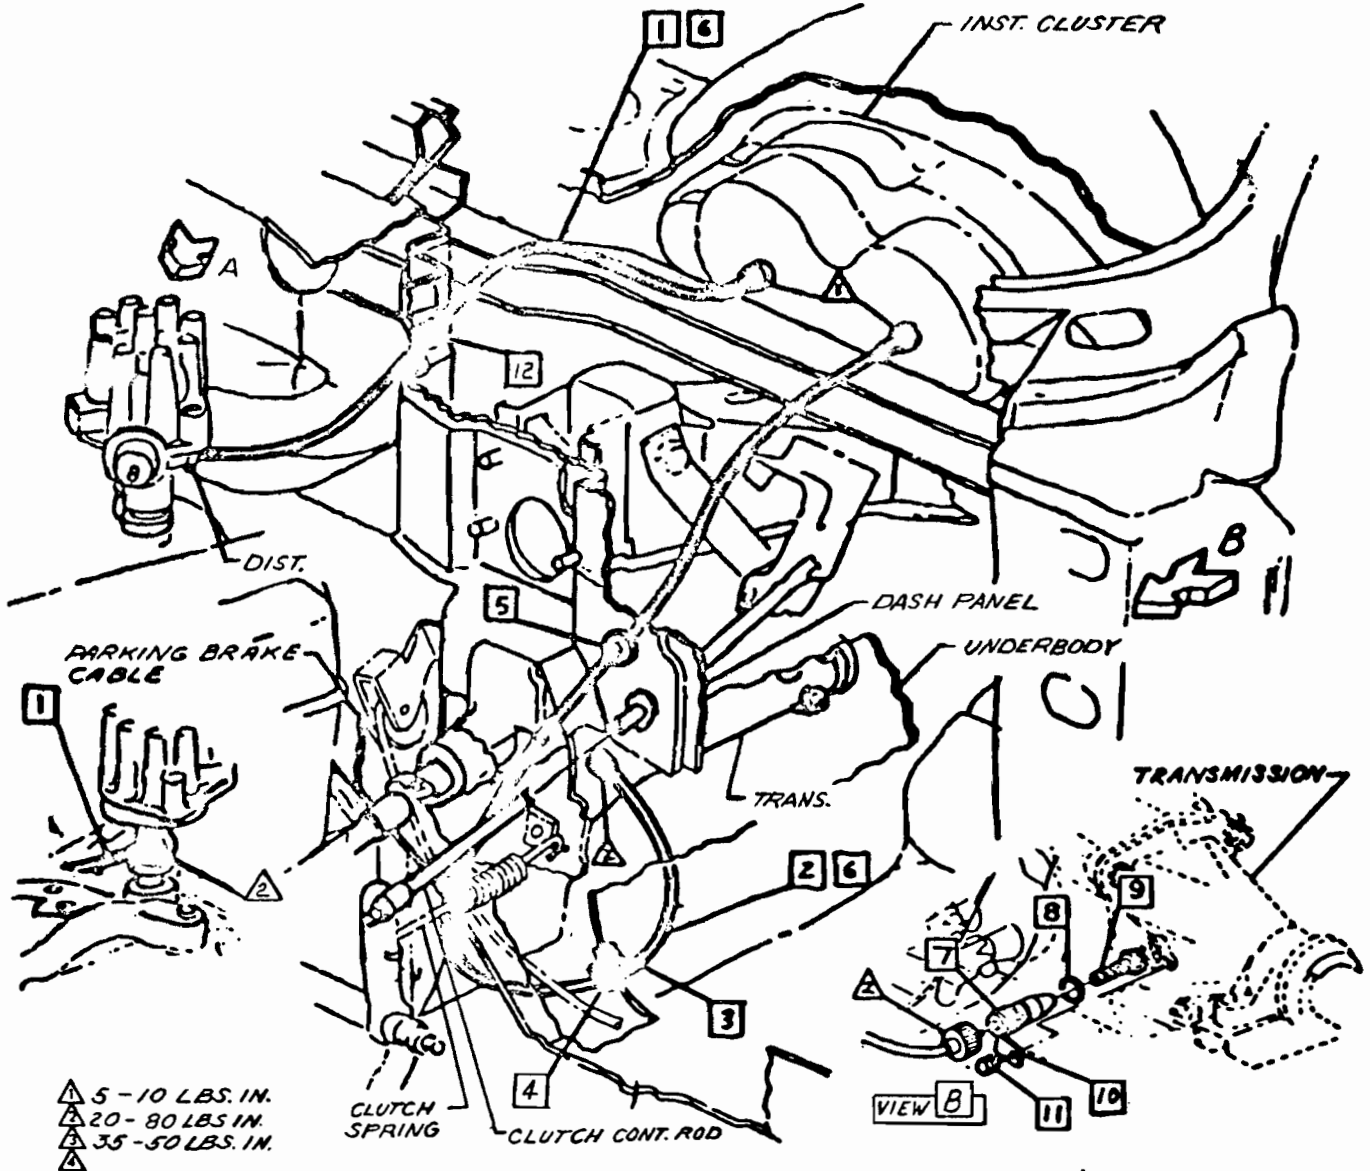

CHEVROLET MOTOR DIVISION, GMC				UPC	DATE	SYM	REVISION RECORD	AUTH.	DR	CS
SPEEDO AND TACH. SHAFTS				12						
19000				C3.						
DWG	W/C	REF: C3.00	L-	L-						
DATE REL. 6-4		L-	L-	L-						
				SHEET	X					