


From Don Olson's diagram for the 1960 Corvette

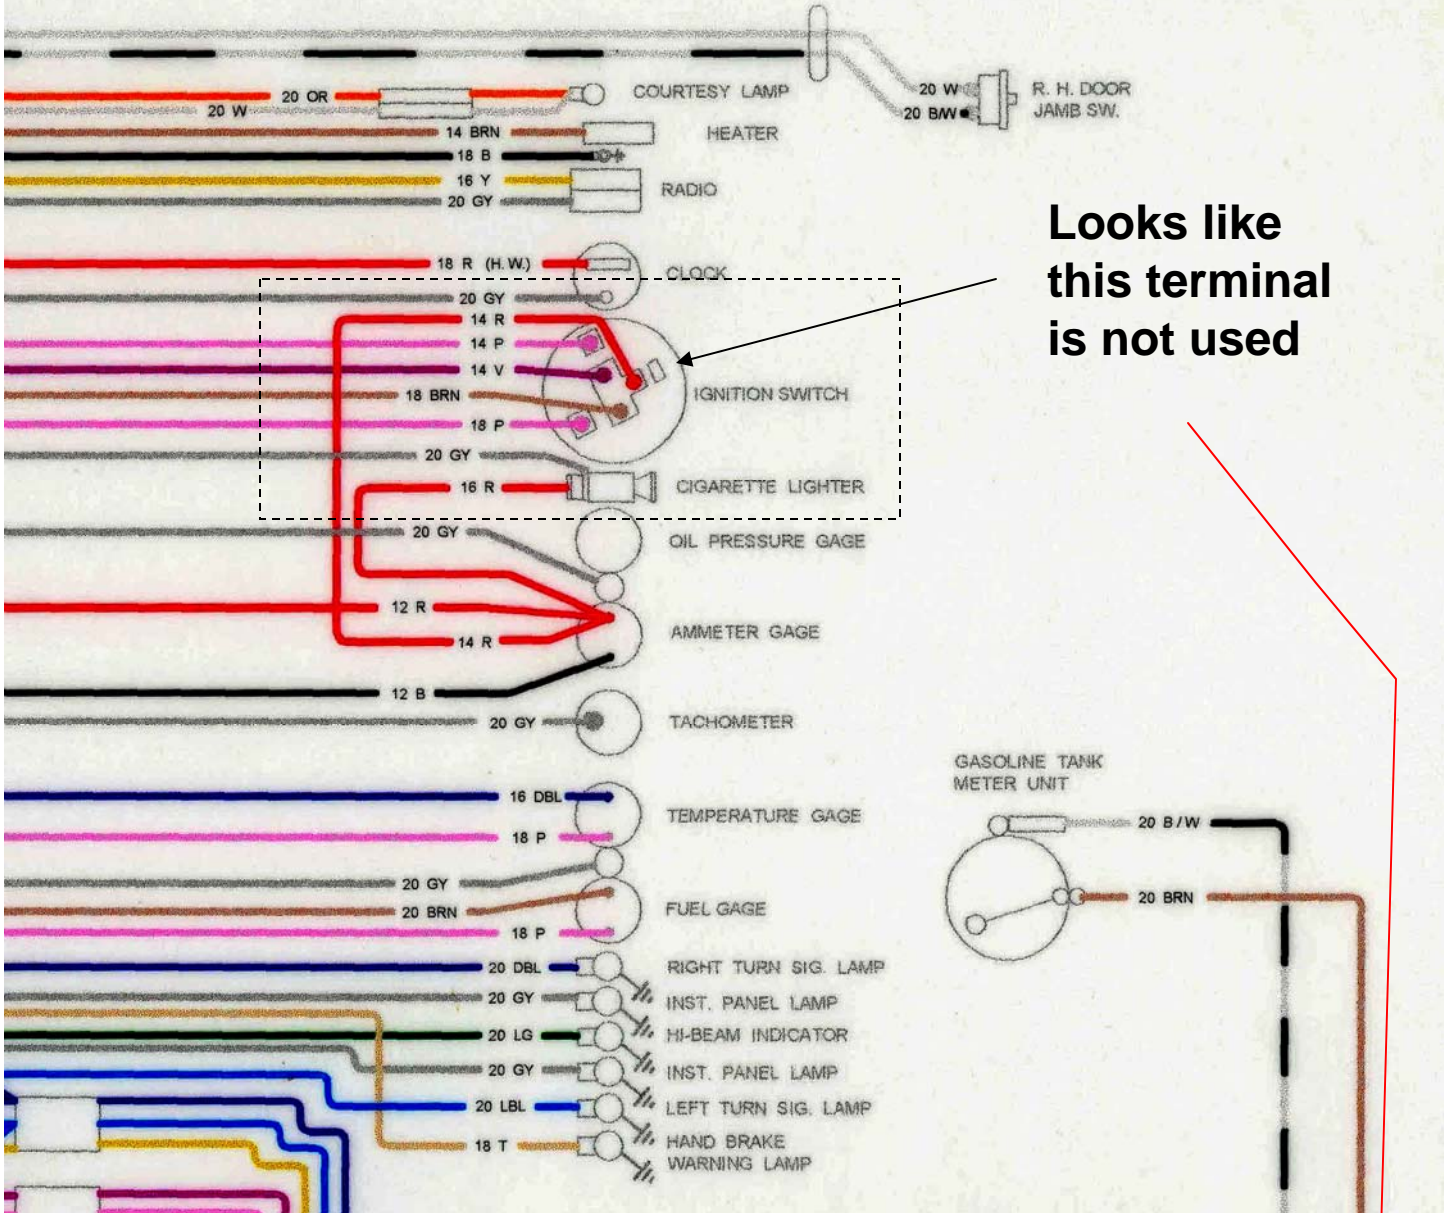

Looks like this terminal is not used

