






Remove this cover plate to expose the vent-window regulator assembly. Check to see if there are any issues with the insertion of the T-Post into the regulator at the point shown below. My '65 had a snapped t-post on the psgr side when I got it.

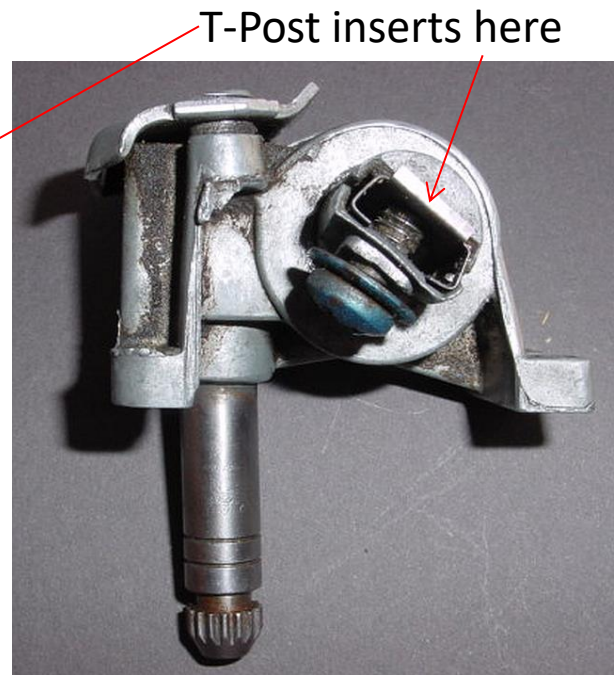


The regulator assembly can be removed, if necessary, by removing the 3 bolts circled in red and the one attaching the post into the regulator (rectangle). It is attached to the bracket by the 3 screws (green circles).

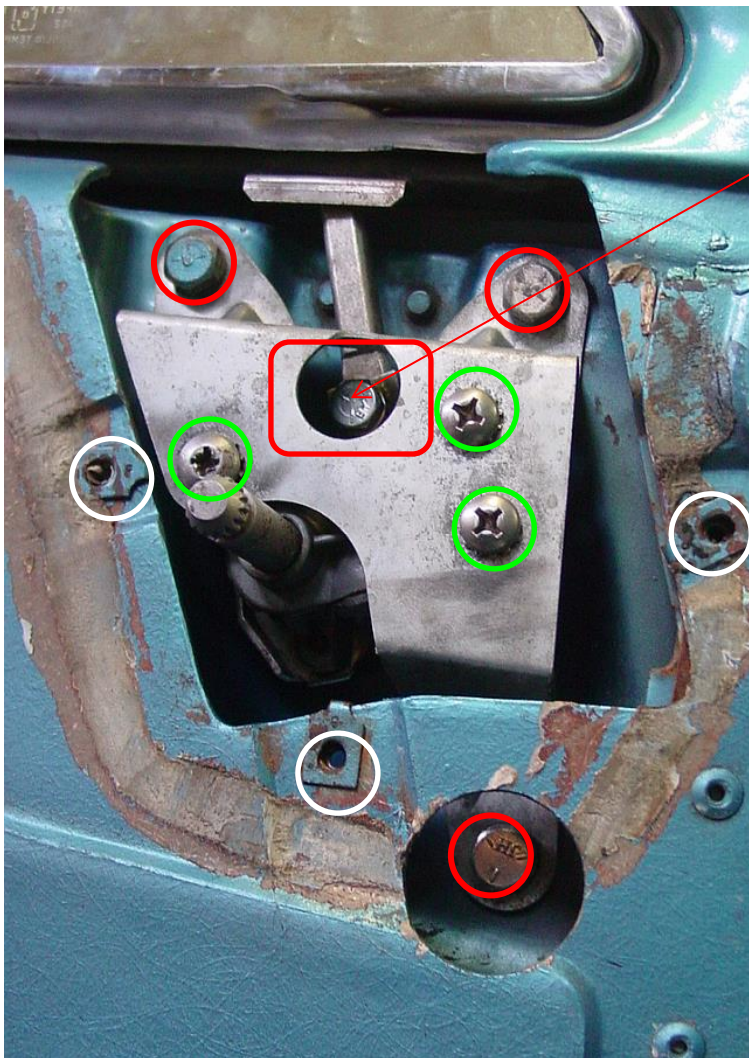

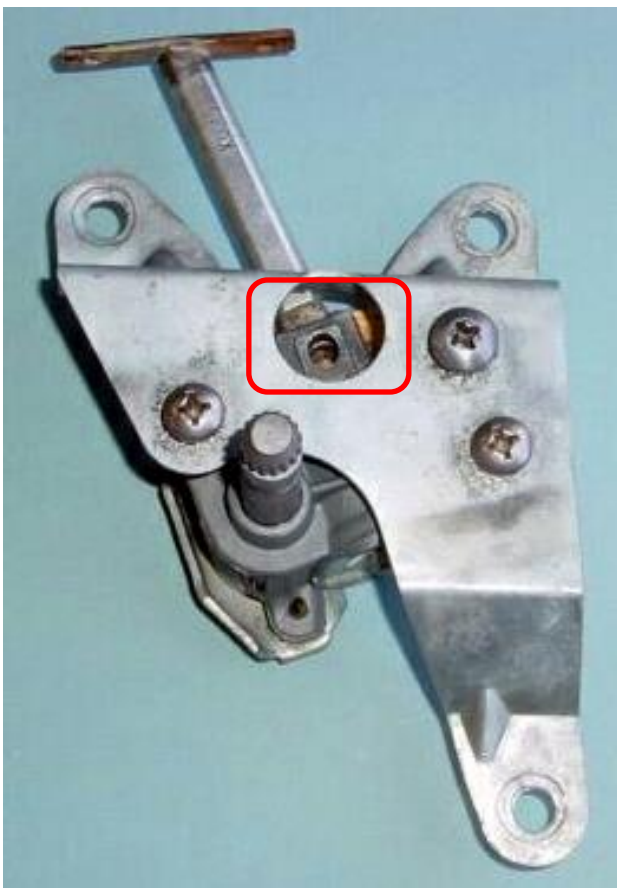

Hinge pivot and rivet on vent-window frame

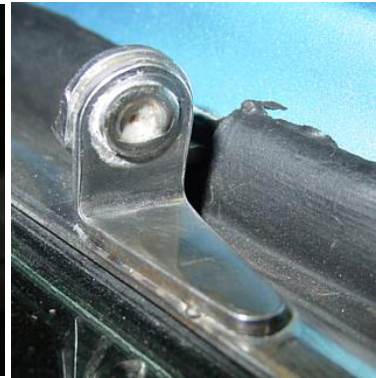

T-Post is riveted to the vent-glass frame.

