


1970 Vacuum Hose Kit Headlights & Wiper Door

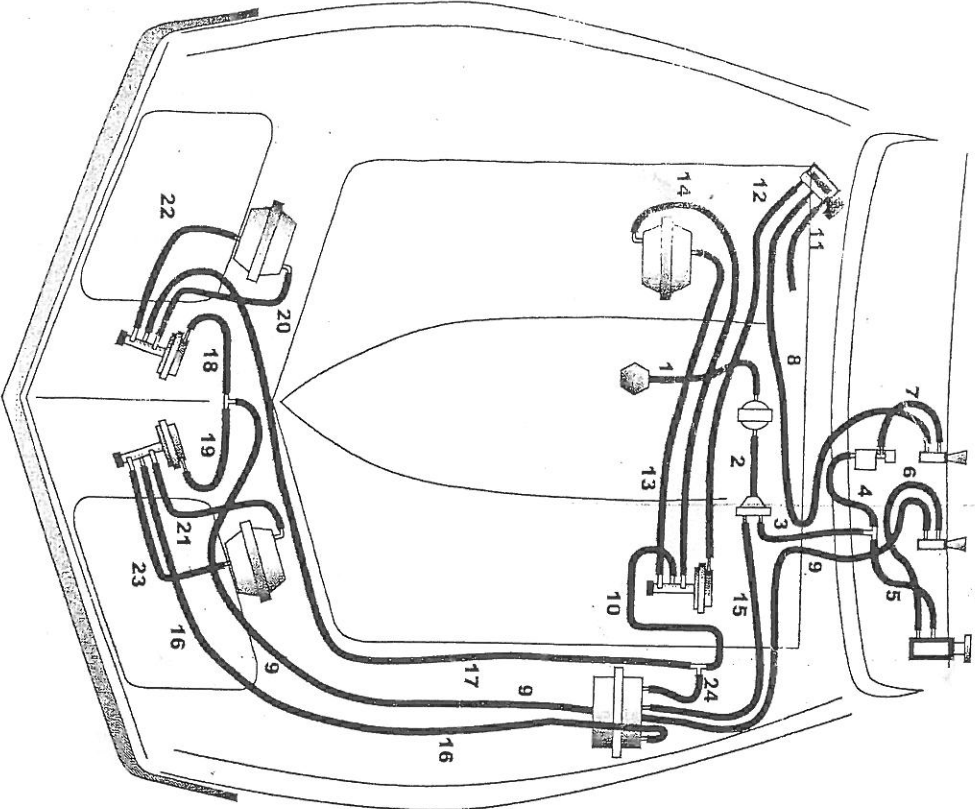

HE99C

INSTRUCTIONS

Hose #	Description
1	Medium Black 4"
2	Medium Black 20"
3	Small Black 30"
4	Small Yellow 11"
5	Small Black 18"
6	Small Blue 18"
7	Small White 1 1/4"
8	Small Red 52"
9	Small White 100"
10	Large Yellow 13"
11	Small Black 15"
12	Small White 36"
13	Large Green 26"
14	Large Red 30"
15	Medium Black 21"
16	Large Yellow 77"
17	Large Green 84"
18	Small White 14"
19	Small White 14"
20	Large Red 23"
21	Large Red 23"
22	Large Green 16"
23	Large Green 16"
24	Large Black 9"

1. It is best to replace hoses one at a time using the diagram and color codes supplied.
2. Large black "T" connect hoses 10, 17 & 24.
3. Small white "T" connects lines 9, 18 & 19 and 3, 4 & 5.
4. Three small straight connectors are provided for ease of installation under the dash. They install behind the firewall grommet that hoses 3, 8 & 9 pass through.
5. Lines 3, 8 & 9 pass through the same firewall grommet.
6. Hoses 8, 11 & 12 pass through the same firewall grommet.
7. Vacuum lines running together were taped on approximately 6" center. Refer to your old hose harness. New tape is provided in the kit.
8. Headlight & wiper door actuator relays are color and letter coded R = Red, Y = Yellow & G = Green.
9. Hose 10 must be cut to install Heater/AC vacuum control hose. Reuse old "T", not included.