



## Suggested Installation Instructions for: 614-931, 1984-96 Coupe Foil Sound Deadening Kit

### TOOLS NEEDED:

Heavy Duty Scissors

[Heavy Duty Spray Glue, \(Part #100-812\)](#)

1 1/2"- 2" Masking Tape



### PREPARATION:

Make sure all carpeting is removed and loose residue is vacuumed.

### INSTALLATION:

*NOTE: This sound deadener is intended to be installed FOIL SIDE FACE DOWN for maximum heat shielding.*

- Using the line drawing as a guide lay out the pieces on the floor to make sure you have all the pieces.
- It is easier to work from the rear of the car to the front so that you are not walking and crawling on the sound deadener. This applies to installing the carpeting as well.
- Position the pieces in the rear section. It is helpful to have some 1 1/2"- 2" wide masking tape to help hold down each correctly positioned piece to the floor pan. When you are comfortable with the fit of each piece, release the tape on one side and fold half of that piece back. Spray glue on the foil and the floor pan in that area, let set the recommended time, and stick down. The masking tape can be re-stuck down to hold that piece in place while you are lifting the other half to be glued. The masking tape can be left permanently, as it will not affect the performance of the material.
- Once the rear compartment is finished, position and glue down the riser piece next, which is the angled wall behind the seats.
- Position the center console pieces and the small pieces up at the top of the firewall next, saving the main floor pieces for last.
- When you are ready to start installing the carpeting, lay some cardboard down on the sound deadener piece you are kneeling on so that you don't tear it as you are putting the carpet pieces in.

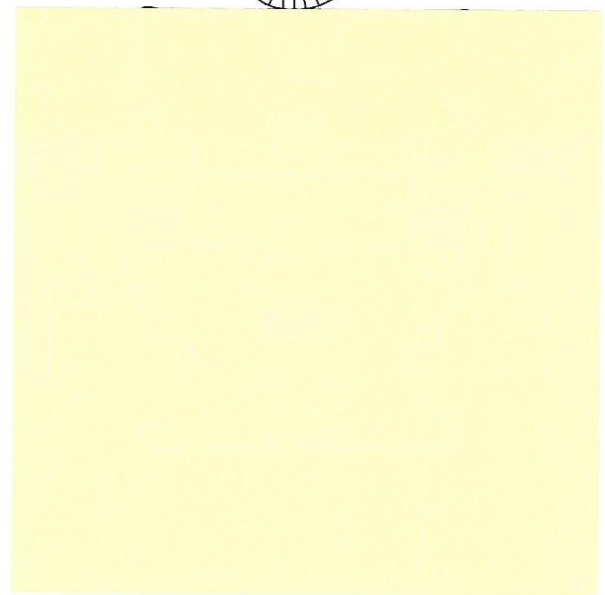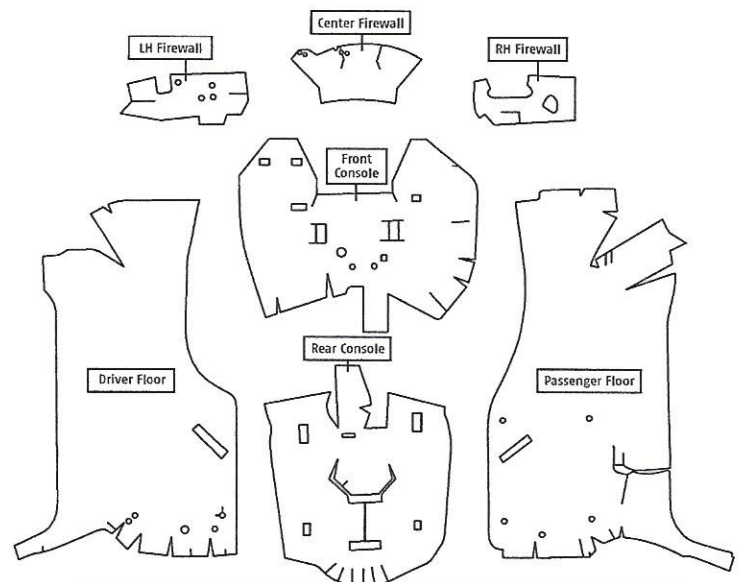

Mid America Motorworks, 17082 N US Hwy 45, P.O. Box 1368, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800 • [www.mamotorworks.com](http://www.mamotorworks.com) • [mail@mamotorworks.com](mailto:mail@mamotorworks.com)

Form #614931-080515 Copyright 2011 Mid America Motorworks