





JW Motoring C5 LED DRL Replacement

There are a few ways to do this. I find this to be the easiest. Some of this is taken direct from the service manual.

1. Safely jack and support the front of the vehicle. Use jack stands as you will be working under the vehicle. Use wheel chocks for the rear wheels.
2. Remove the front fascia lower closeout panel.

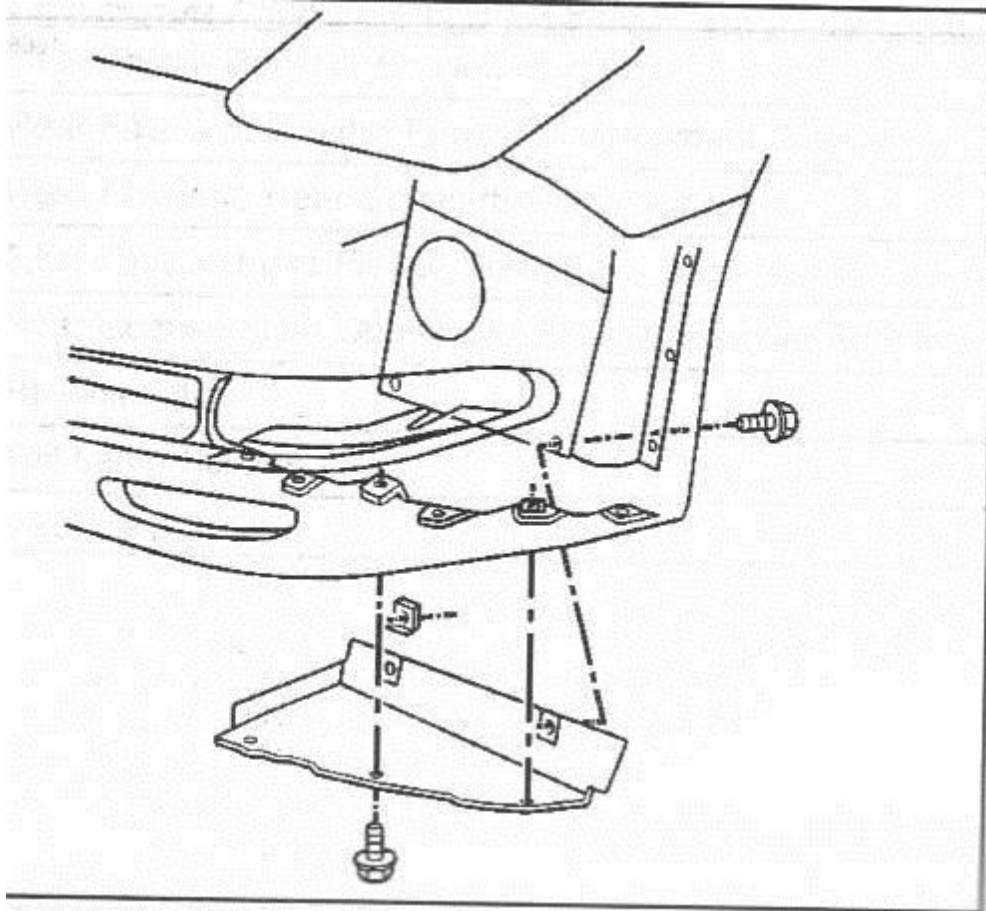

3. Disconnect the sockets from the lamp and remove the old bulbs.

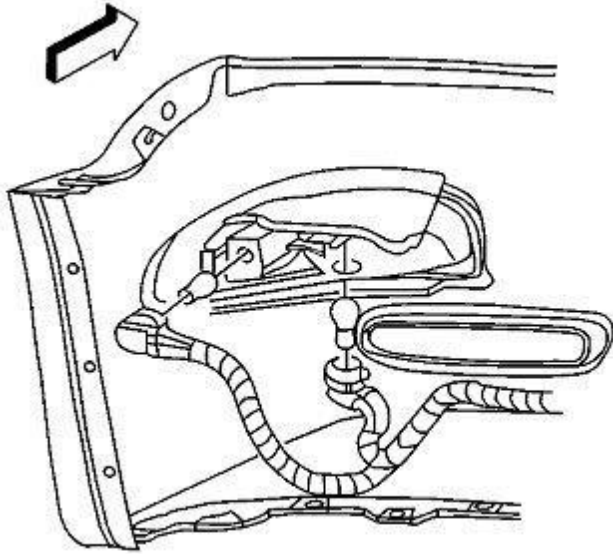

4. This step is important. With the LEDs you will notice they plug in two ways. This is cool, but they only work one way. In order to figure that out all you need to do is turn your DRLS on (turn on your lights) and lightly press the bulb in. Do not press it in all the way as it's tough to get out. If it doesn't light up switch it.

5. You may notice they are a little tough to push in. This is due to the heat of the stock bulbs. They will fit. You may need to apply pressure to the top of the bulb in order for them to click in. Do so carefully so the bulb does not break.

If your sockets are burnt really bad you should replace them.

6. When you have one side done do the same thing to the other.

7. After everything checks out reverse steps 1 and 2 to button everything back up.

You are done! Enjoy your new LEDs from JWM!

JWM

JW MOTORING