

## Chevrolet Corvette 1997-2004 XSVI-2004

### 1997-2004 GM accessory Interface

- Provides accessory (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- High level speaker input
- Retains door woofers
- USB updatable

---

## INSTALLATION INSTRUCTIONS

### Wiring the XSVI-2004:

- Connect the **Yellow** wire to the radio's 12-volt battery or memory wire.
- Connect the **Black** wire to the radio's ground wire.
- Connect the **Red** wire to the ignition wire of the aftermarket radio.
- Connect the **Orange/White** wire to the illumination wire of the aftermarket radio. If the aftermarket radio has no illumination wire, tape off the orange wire.
- Connect the **Blue/White** wire to the amp turn on wire of the aftermarket radio.
- Connect the **White** wire to the left front positive speaker output of the aftermarket radio.
- Connect the **White/Black** wire to the left front negative speaker output of the aftermarket radio.
- Connect the **Gray** wire to the right front positive speaker output of the aftermarket radio
- Connect the **Gray/Black** wire to the right front negative speaker output of the aftermarket radio.
- Connect the **Green** wire to the radio's left rear positive speaker output.
- Connect the **Green/Black** wire to the radio's left rear negative speaker output.
- Connect the **Purple** wire to the radio's right rear positive speaker output.
- Connect the **Purple/Black** wire to the radio's right rear negative speaker output.



**1-800-221-0932**



**metraonline.com**


## INSTALLATION INSTRUCTIONS

### Initializing the XSVI-2004:

When all the connections are completed plug the XSVI-2004 into the vehicle. Turn the ignition key to the “On” position for thirty seconds, then turn the key off.

### Adjusting the differential line convertor:

Turn the potentiometers clockwise to increase the audio level of the door woofers and turn the potentiometers counter clockwise to decrease the audio level of the door woofers. (Figure A)

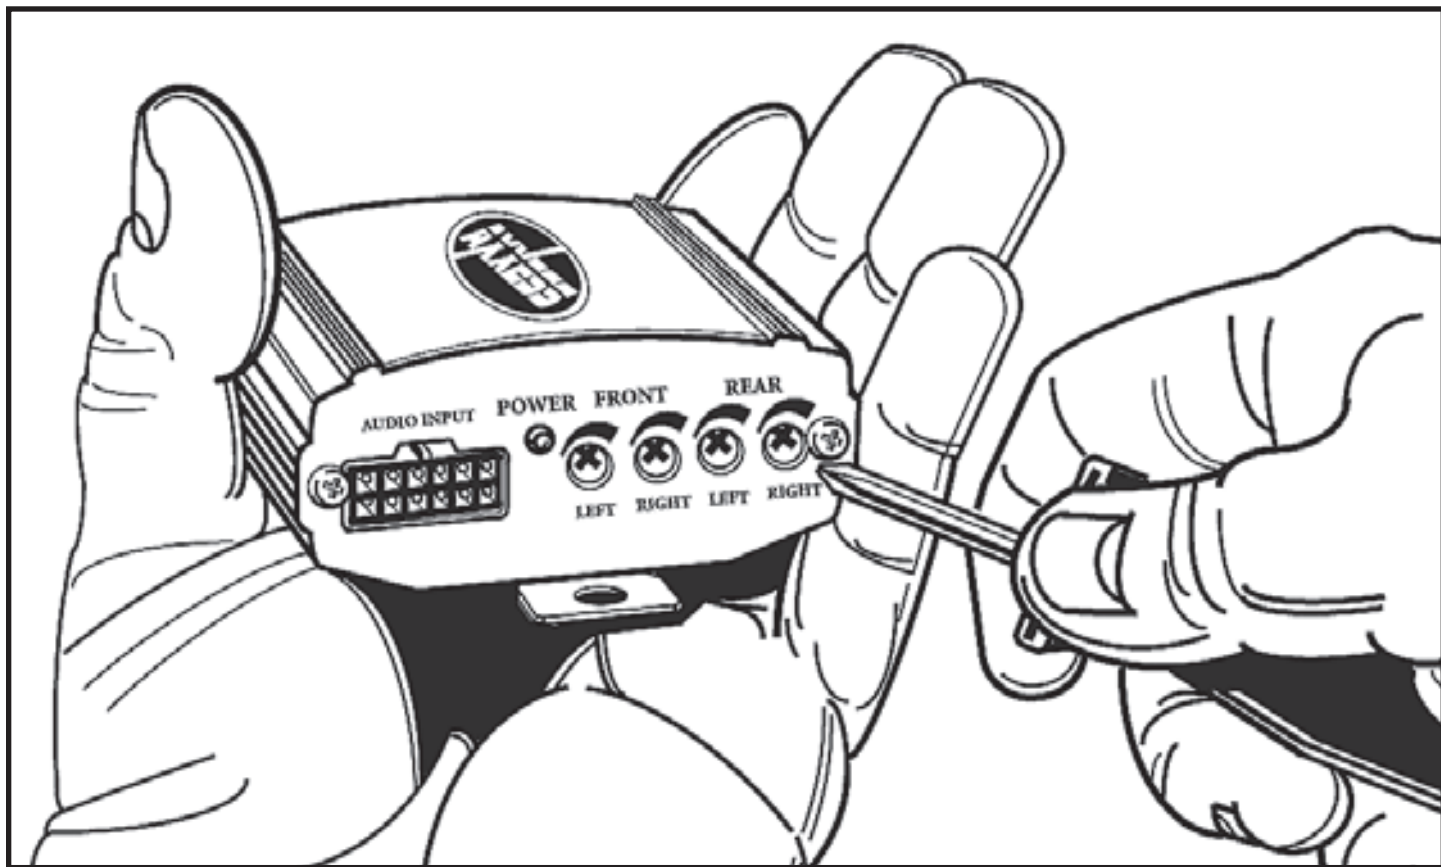

(Figure A)



1-800-221-0932



metraonline.com

9 Pin to car.



BOSE interface.



20 Pin to car.




Loose wires connect to new radio harness.

CHIME / DATA module.



120SVI2004 overview.

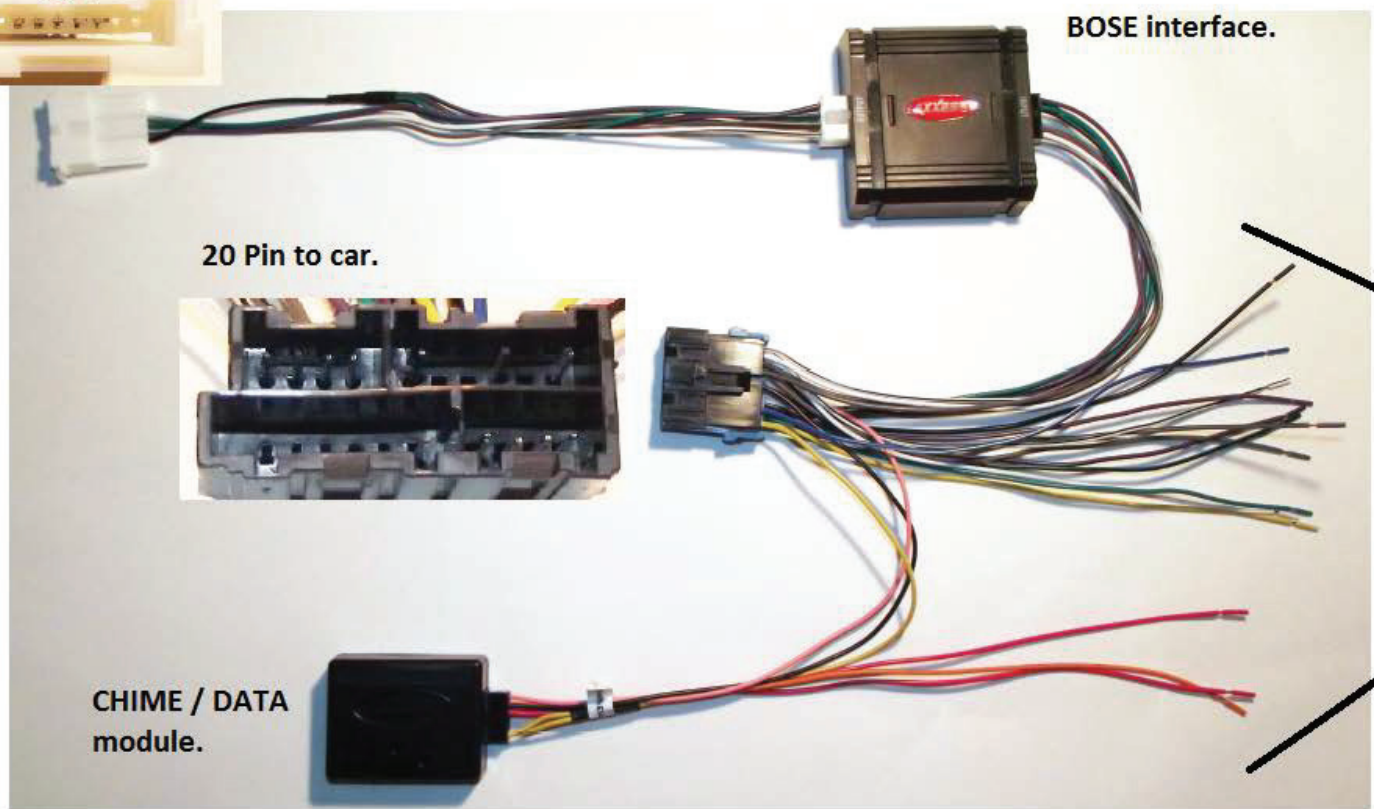

Yes it is normal to have an extra connector from vehicle not plugged into anything on the interface.