

C6 FOOTWELL LEDS

PLEASE NOTE!!!!!! Led strip with short lead is for the drivers side. Longer lead led strip is for the passenger side!!!!!!!!!!!!!!




Using a flat blade screwdriver, pry at the center of the factory light and remove it from the panel above the footwells



Locate the 2 retainers that hold the panel in place. Using a forked panel removal tool or equivalent, pry the retainers out and drop the panel down for access.



Route the connector of the leds down from the top of the panel and through the hole where the light housing installs.

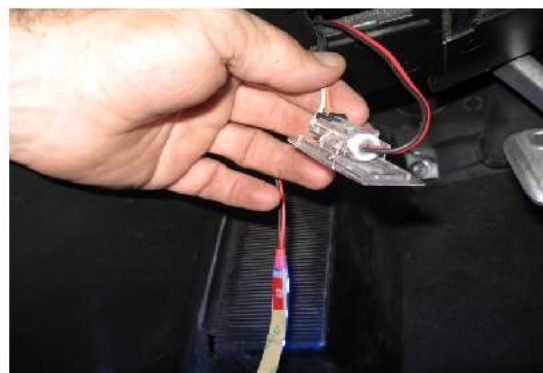

Push the connector into the socket where the bulb was aligning the red wire with the orange wire in the socket. Black aligns with white. Make sure lights are now lit. Make sure lights havent "timed out". Fold wires back and re-install light housing.



Re-install panel and retainers. Plan where you plan to locate the strips. Wipe area with alcohol so strips stick well. Peel backing off led strip and attach strips to the panel. This picture shows the drivers side. Passenger side is similar. If you have any problems getting leds to light, remove connector and spread copper wires on connector out to make proper contact with connector.