



## Bolts to remove to loosen the bottom front Facia

It is best to remove the inner wheel well liners on both sides, as this will free up the side air deflectors from the facia held under the facia with a push retainers and a 10 mm bolt on each side.

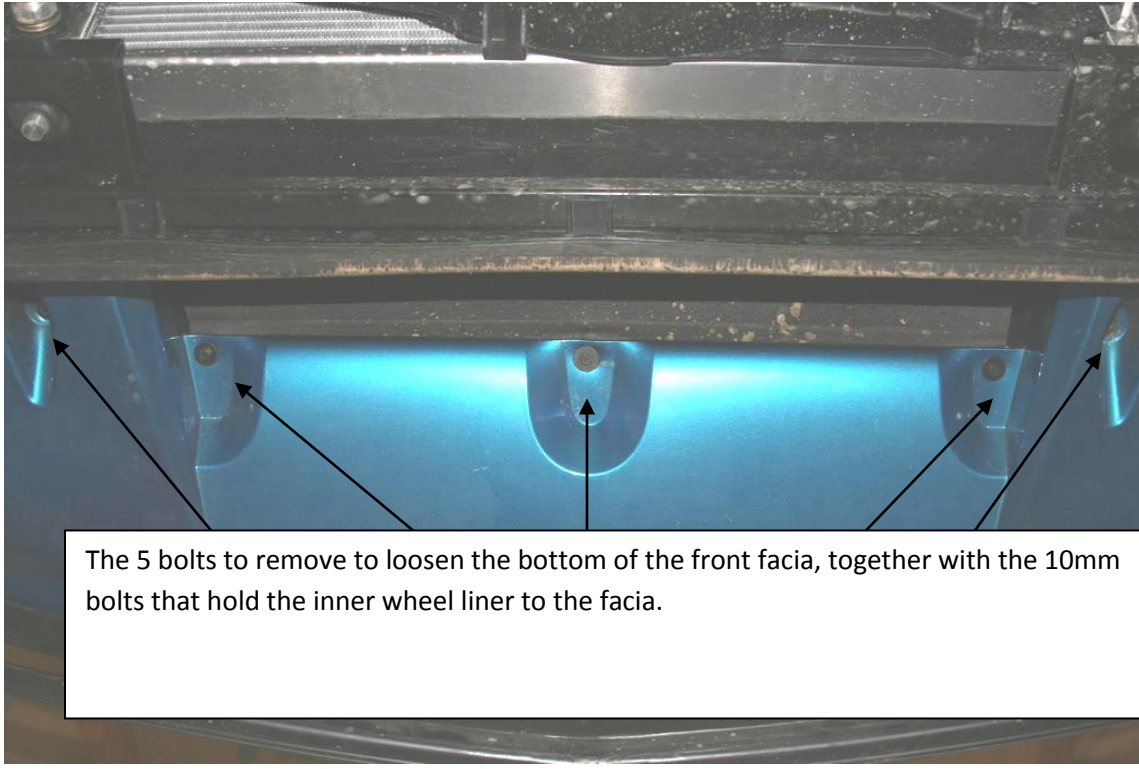

The 5 bolts to remove to loosen the bottom of the front facia, together with the 10mm bolts that hold the inner wheel liner to the facia.

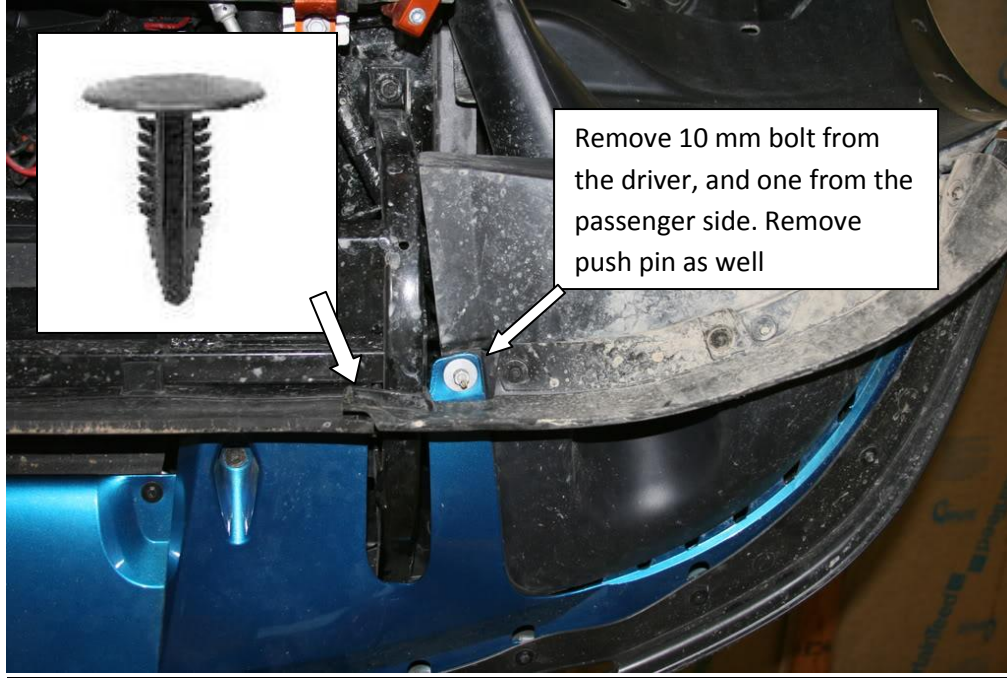

Front center air dam- 3 bolts on top,  
and the 2 push retainers on sides