


## Removing the plastic liner from front wheel well

**Note:** The fender liner hardware on a Z06 will be slightly different from C6 base and other models.

- 1) Remove your wheels to get access to the front plastic wheel wells. To remove the plastic liner from a Z06, remove the (8) Push pins. Remove only (7) push pins from the (Base Coupe) (see pic #2)

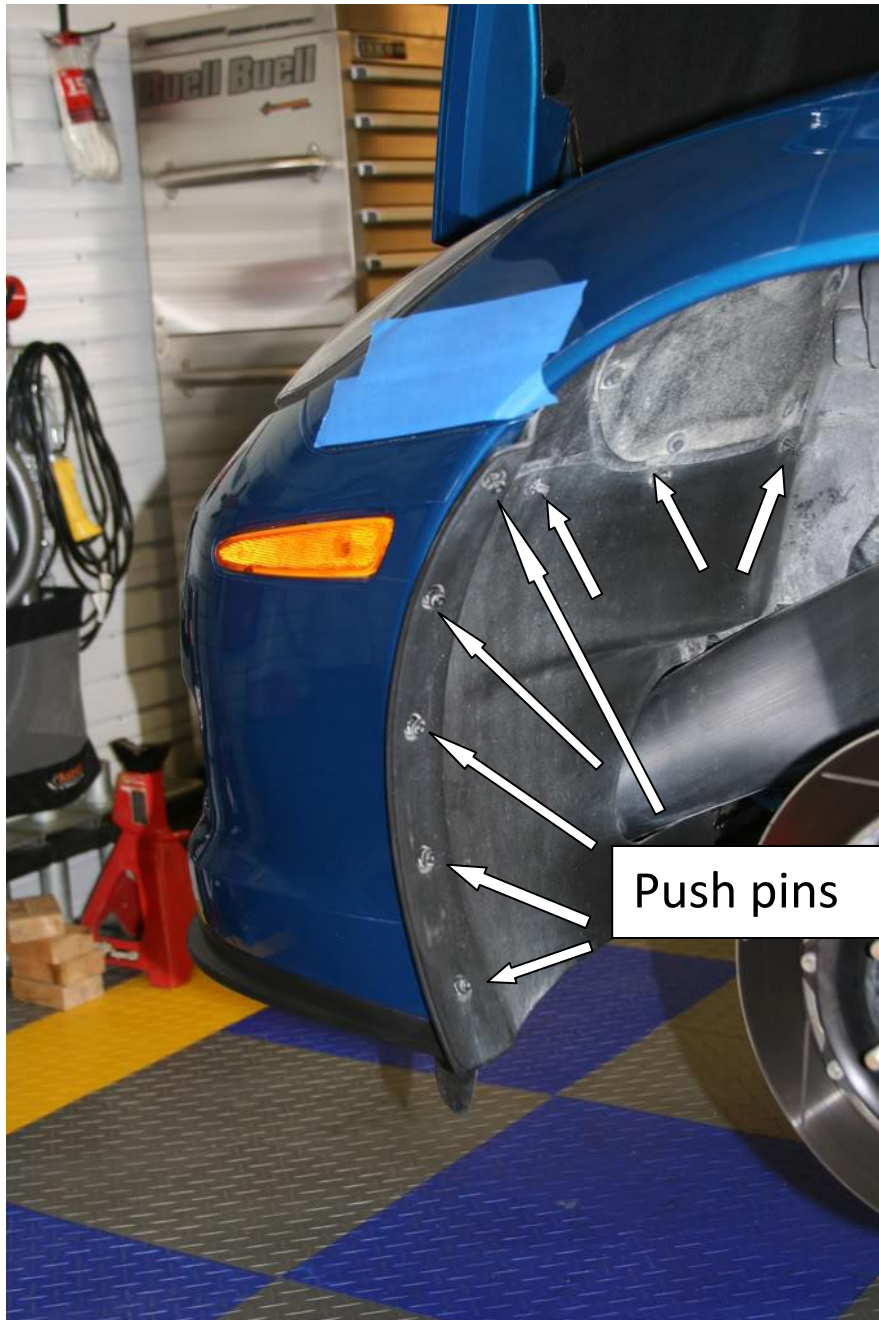


Pic #1 – Z06 liner with brake duct extending behind the brake rotor.

**Pic #2 - For the Base Coupe liner, the bottom push pin does not need to be removed. The Cooling duct does not extend any further than the liner on a Base Coupe or Convertible**



- 2) Once the liner push pins have been removed, then Remove the (1) 10 mm nut on the underside of bumper, and the retainer holding the outer air dam to the center air dam. The liner then pulls out into the wheel well area towards the brake rotor assembly.

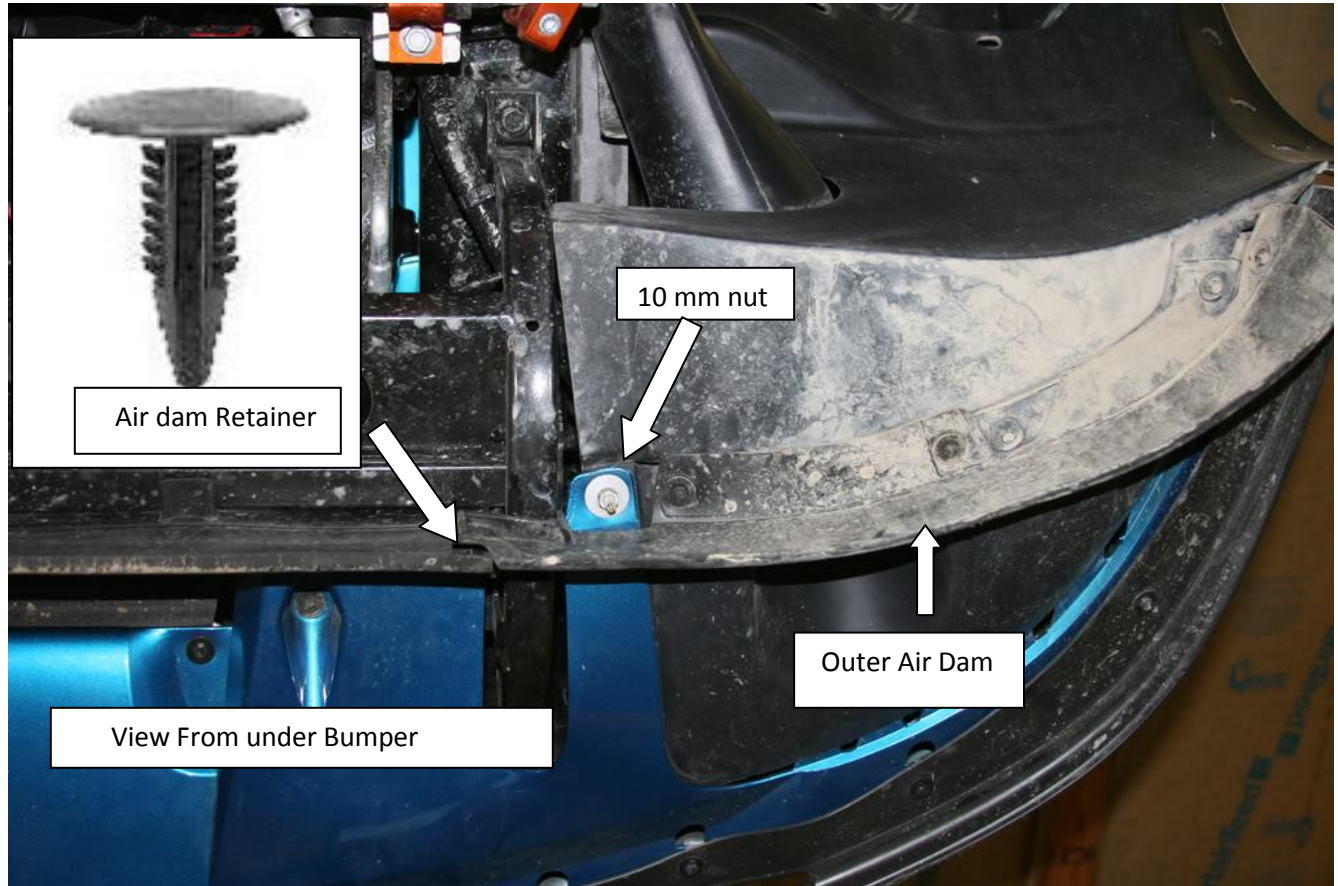



**The wheel liner pulled out from the vehicle in one piece. This picture is of the rear of the liner showing the cooling duct attached.**