
Document ID: 2134121 Page 1 of 2

2011 Chevrolet Corvette | Corvette (VIN Y) Service Manual | Body Hardware and Trim | Exterior Trim |

Repair Instructions | Document ID: 2134121

Front Fender Emblem/Nameplate Replacement (ZR1)



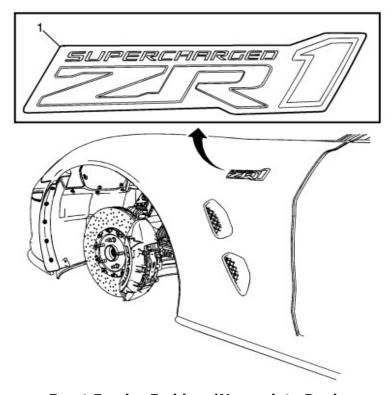

Front Fender Emblem/Nameplate Replacement

Callout	Component Name
1	Front Fender Emblem Assembly Procedure
	1. Use a <i>J 25070</i> heat gun 500-700°F or equivalent to remove the old emblem.
	 When removing protective liners from adhesive backed emblems, be careful not to touch the tape with hands and do not allow the tape to come in contact with dirt or any foreign matter prior to adhesion.
	3. Clean all the adhesive residue from the fender using a 50/50 solution by volume of isopropyl alcohol and clean drinkable water.
	 Wipe the surface dry with a clean lint-free towel prior to installing new emblem.
	5. Apply palm pressure to the emblem to ensure full adhesion is made to the fender.
	Special Tools J 25070 Heat Gun 500-700°F

© 2017 General Motors. All rights reserved.